

kvik

CDBU6406





Check out easy
mounting of you bath



Sink cut out

Front with integrated handle

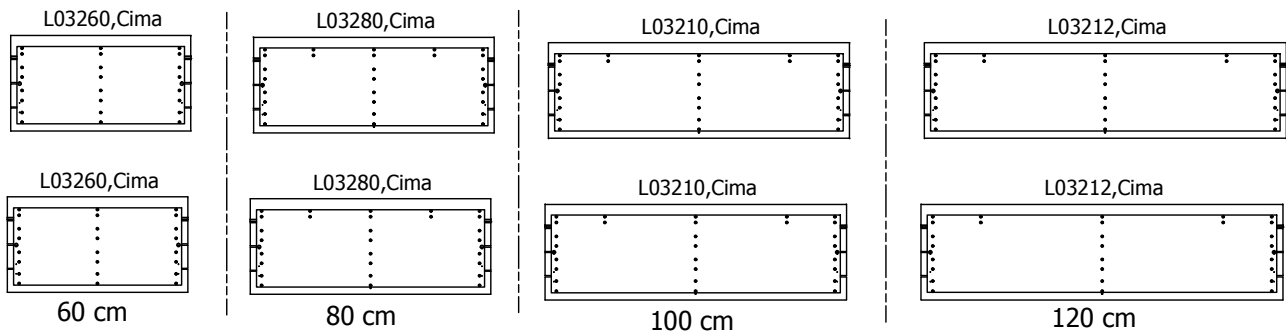

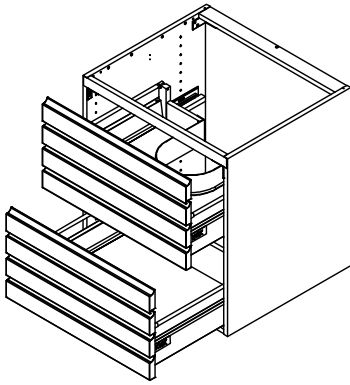

kvik

CDBU6406








Check out easy
mounting of you bath



Sink cut out

BU51**,176

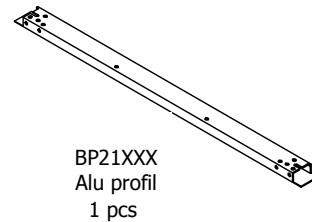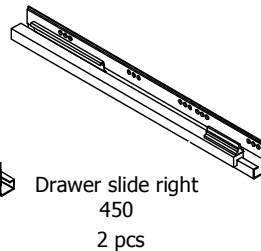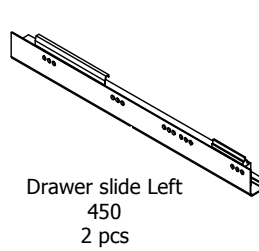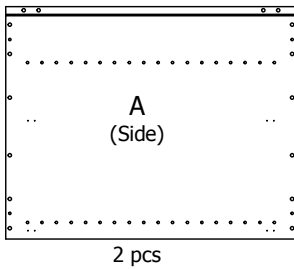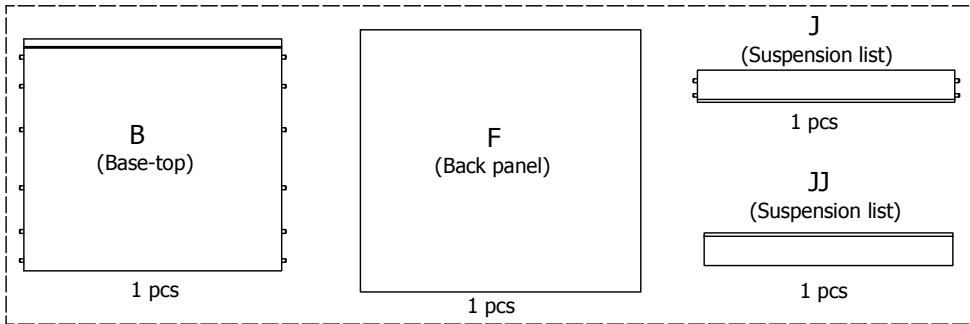

BP00265-BP00250-BP00340

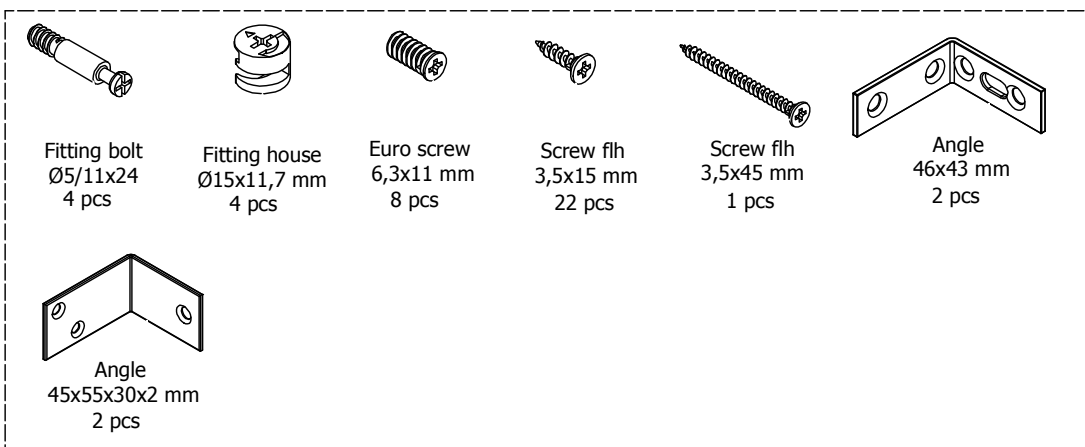


FIG. 1 Side Left

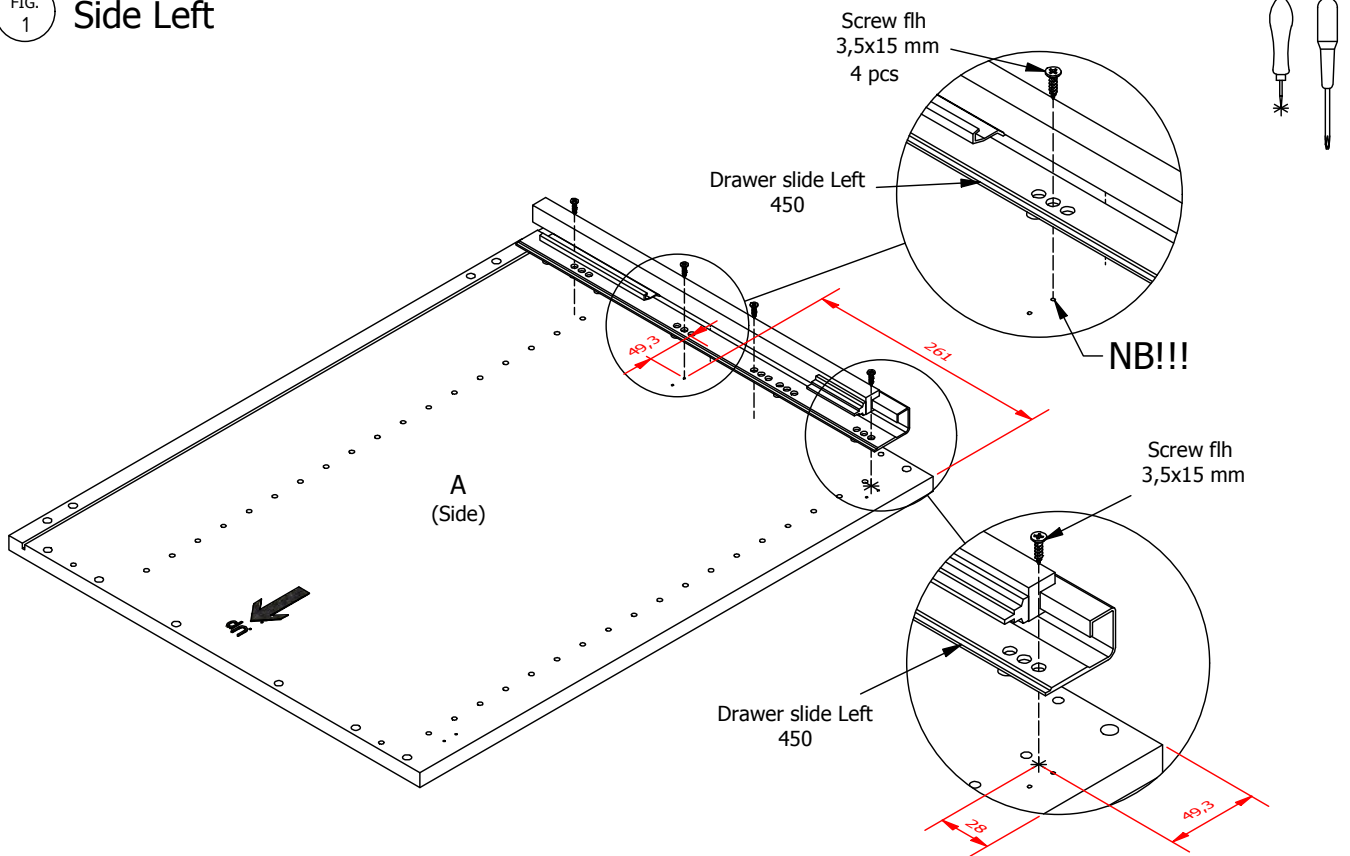


FIG. 2 Side Left

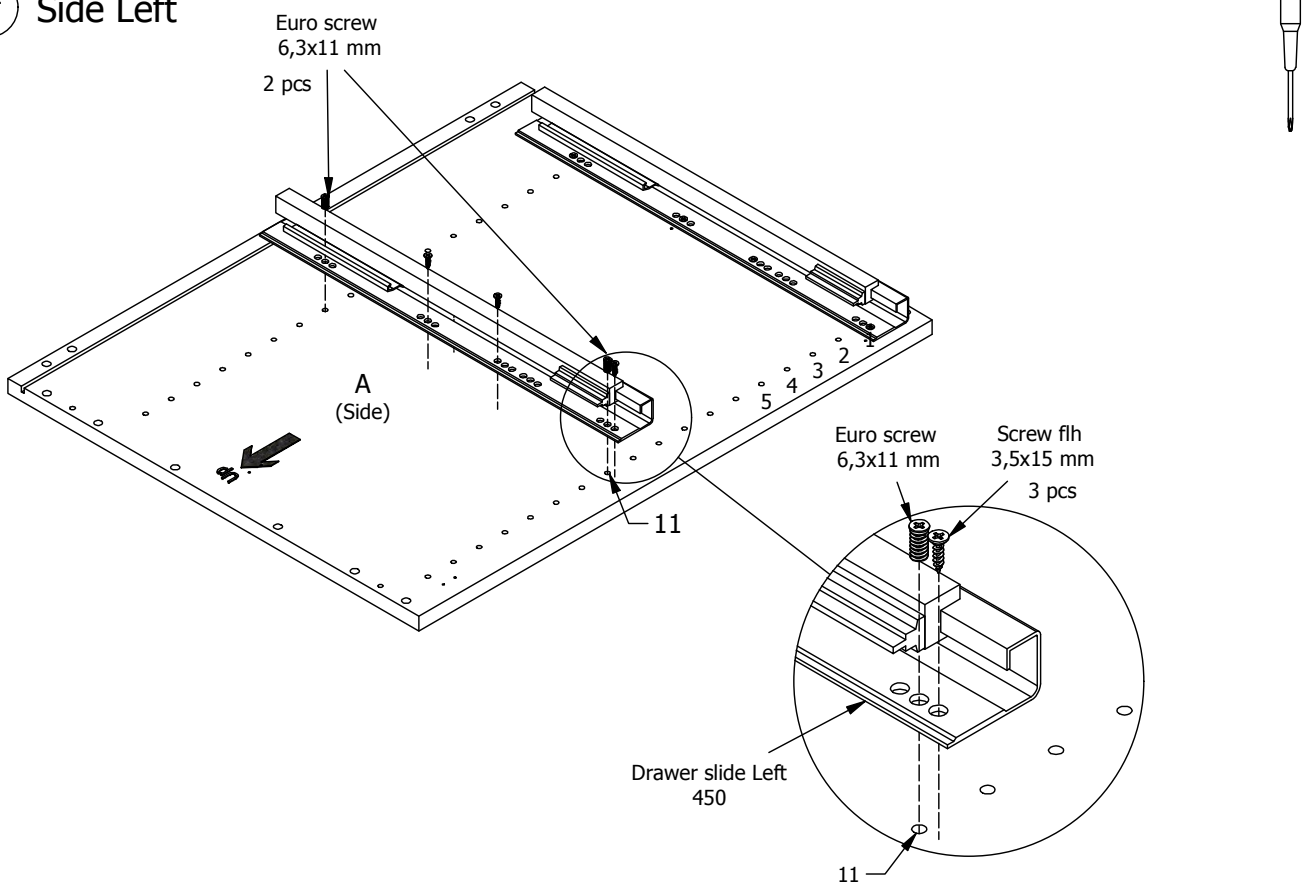


FIG. 3 Side Right

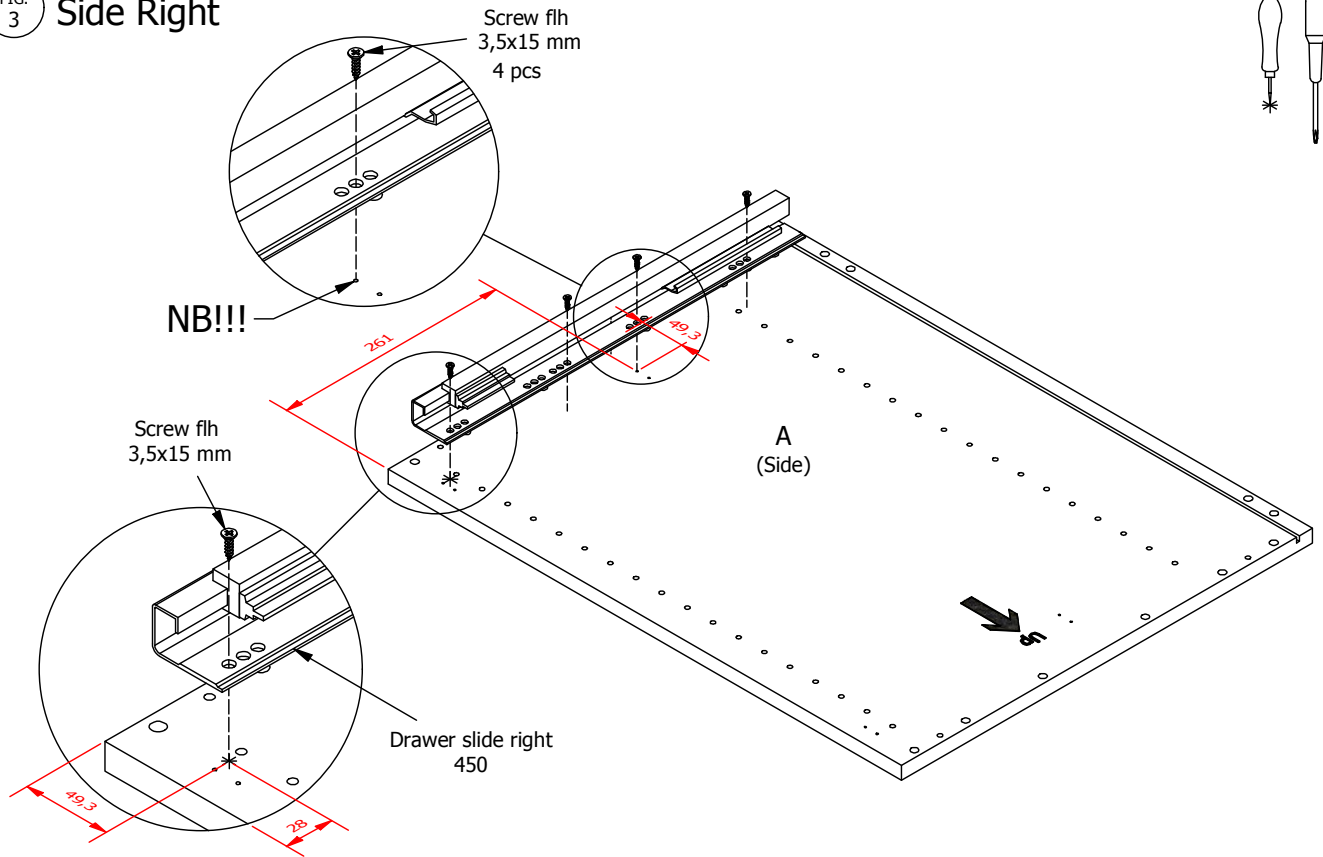


FIG. 4 Side Right

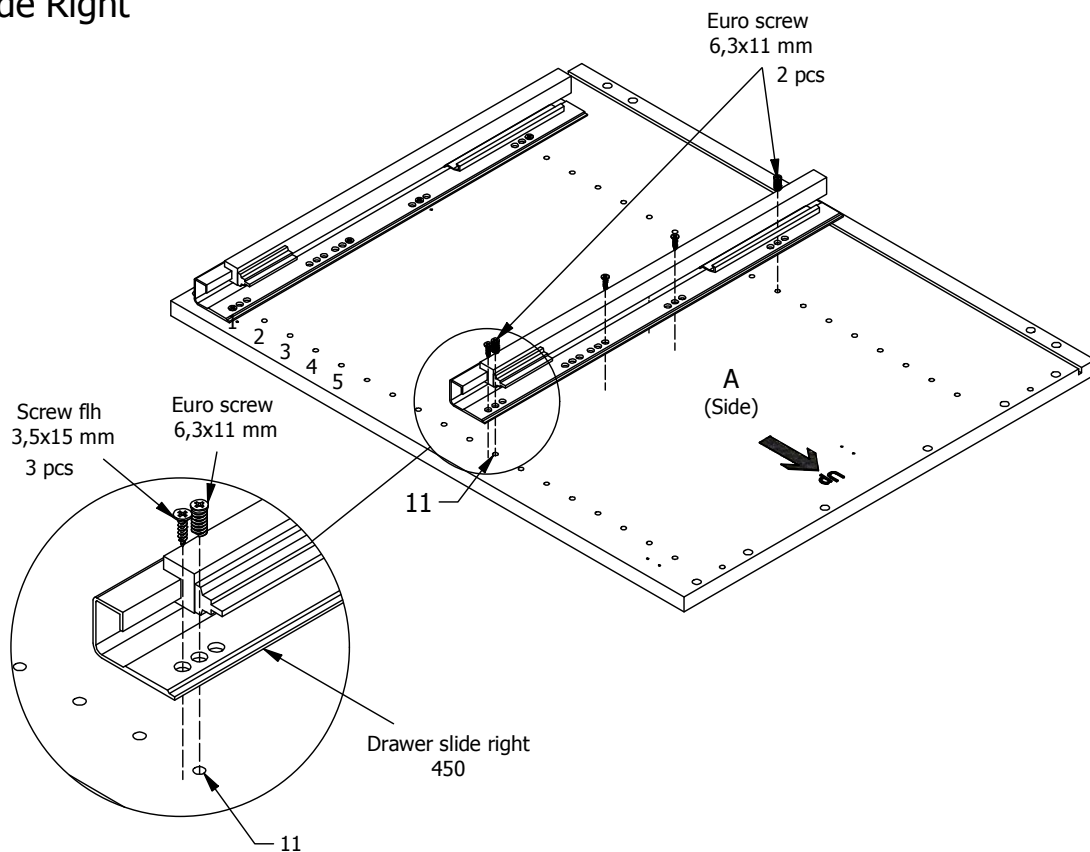


FIG. 5 Side Left

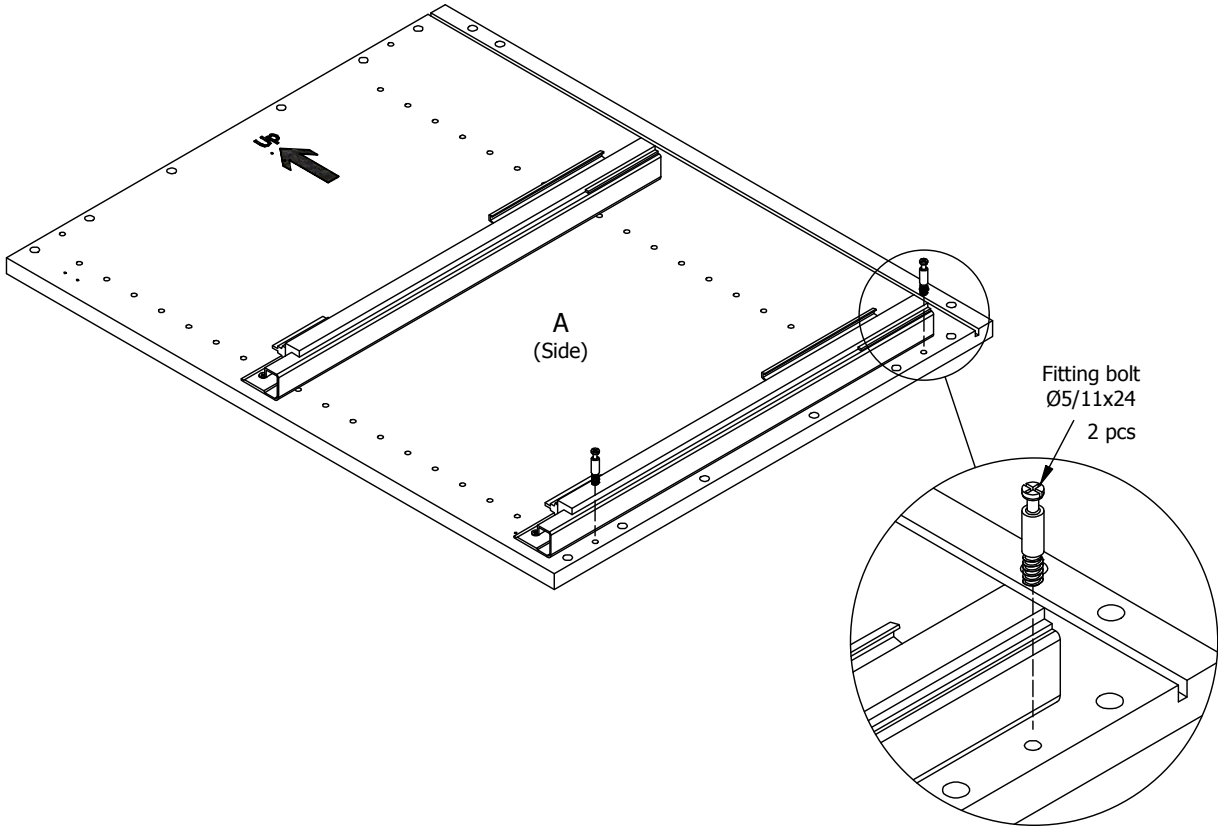


FIG. 6 Side Right

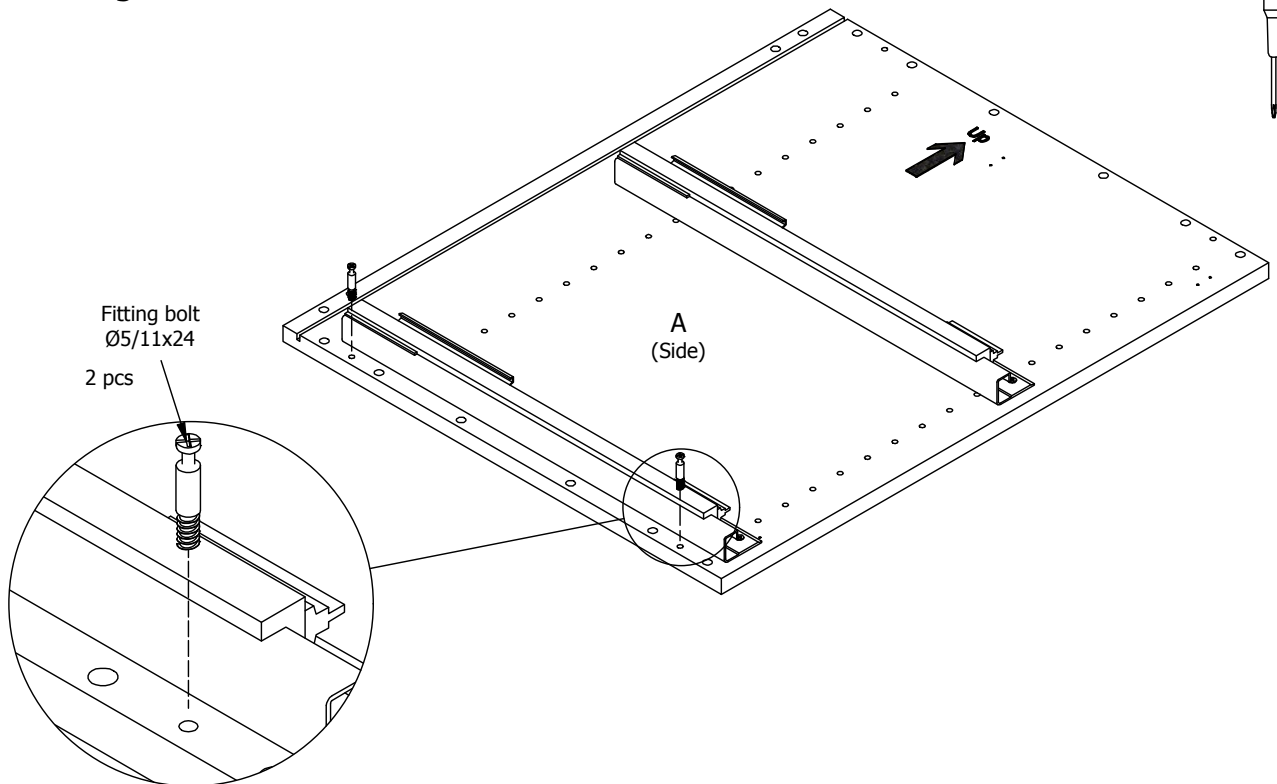


FIG. 7

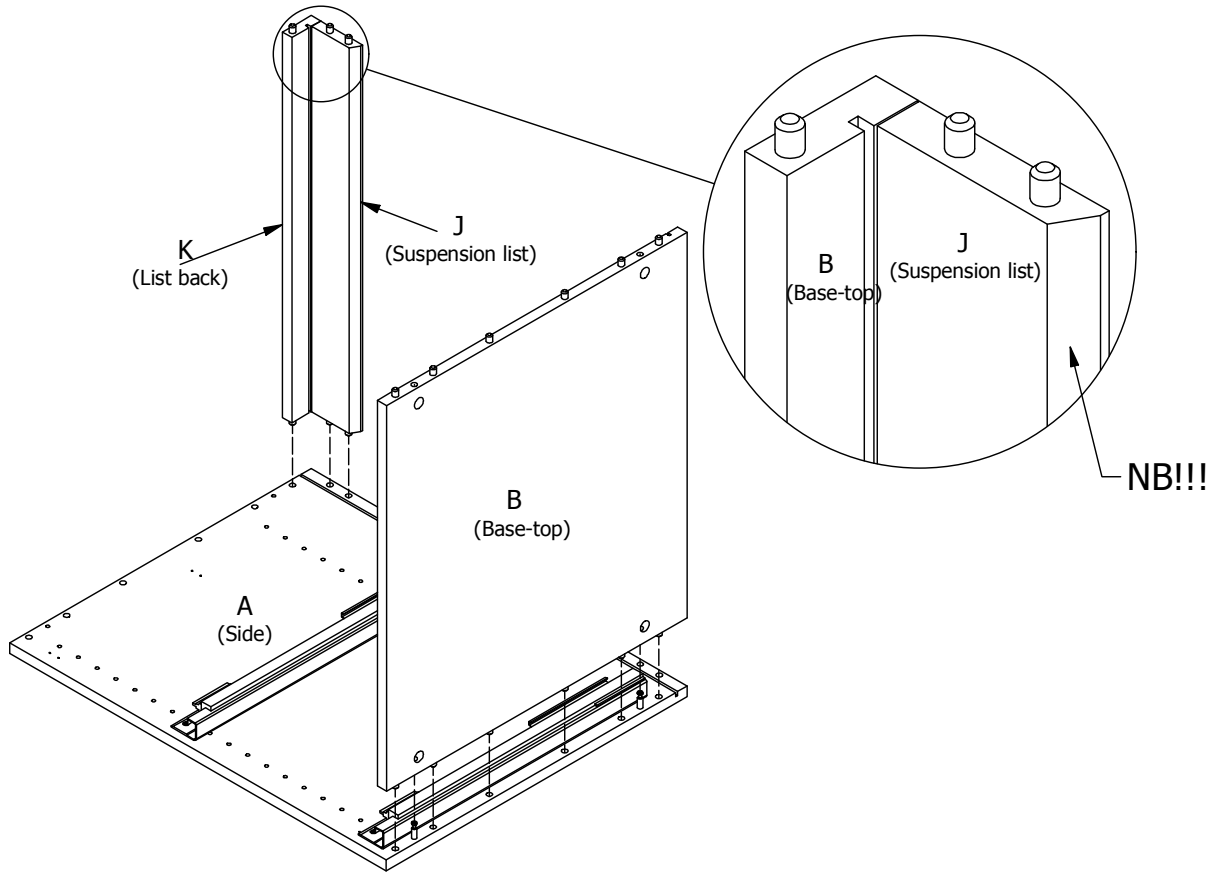


FIG. 8

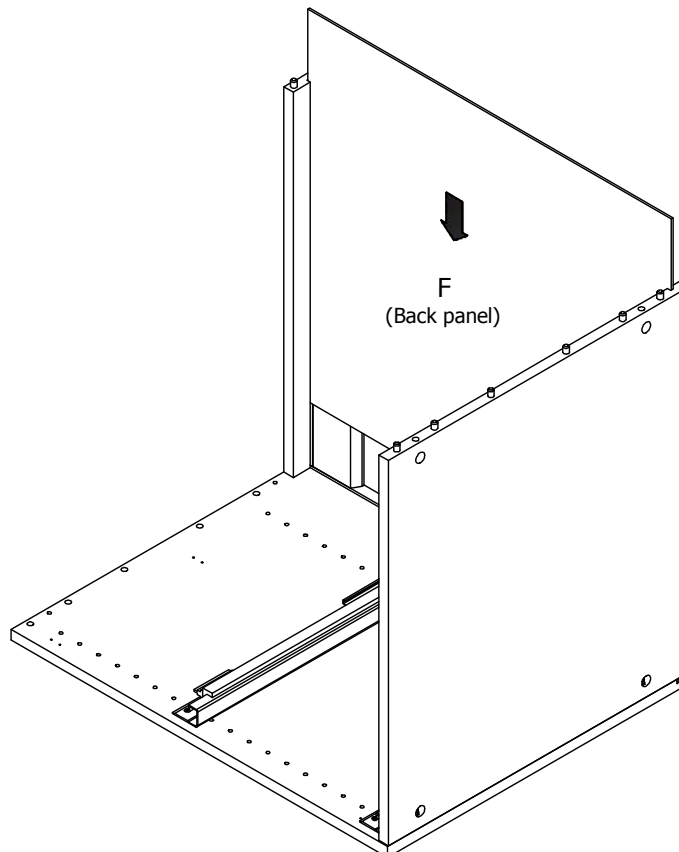


FIG.
9

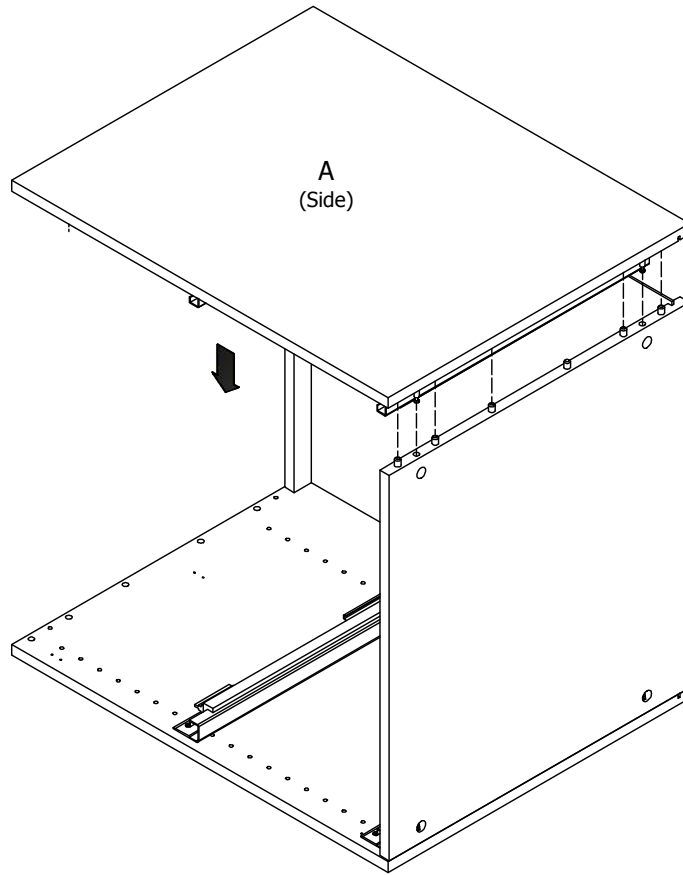


FIG.
10

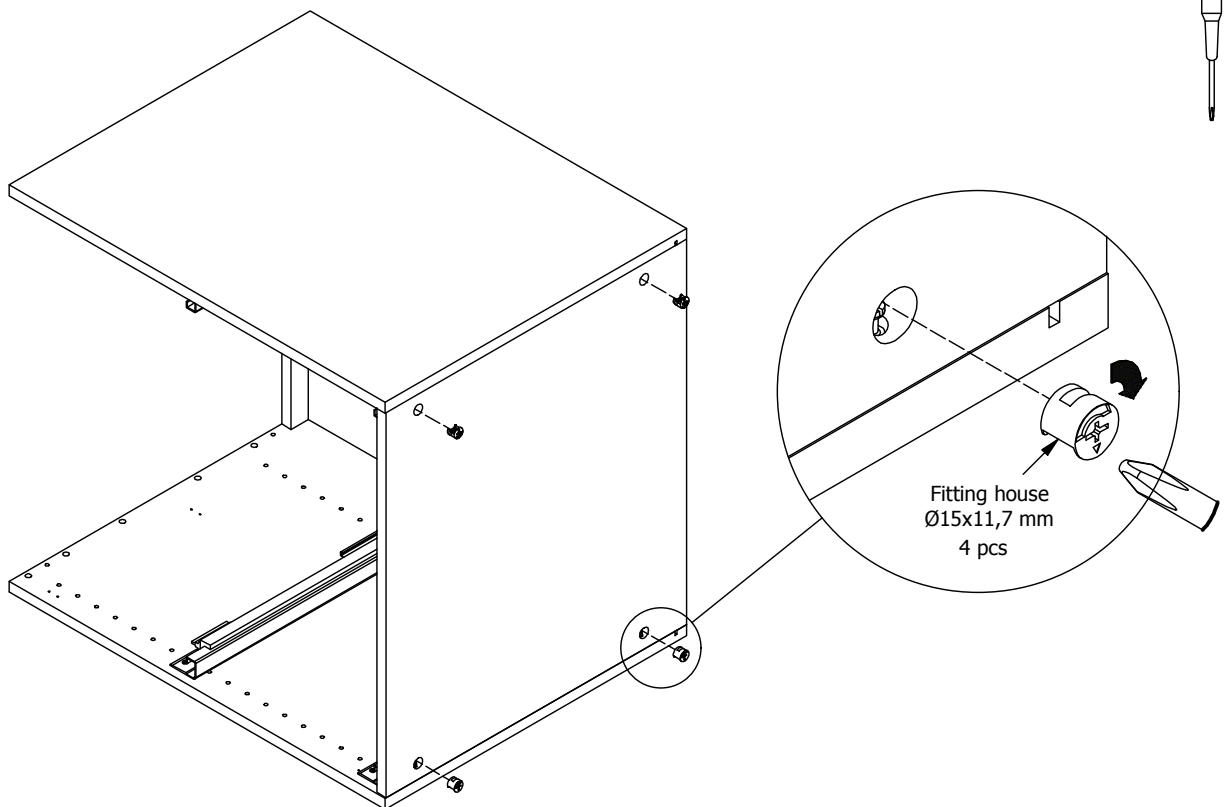


FIG. 11

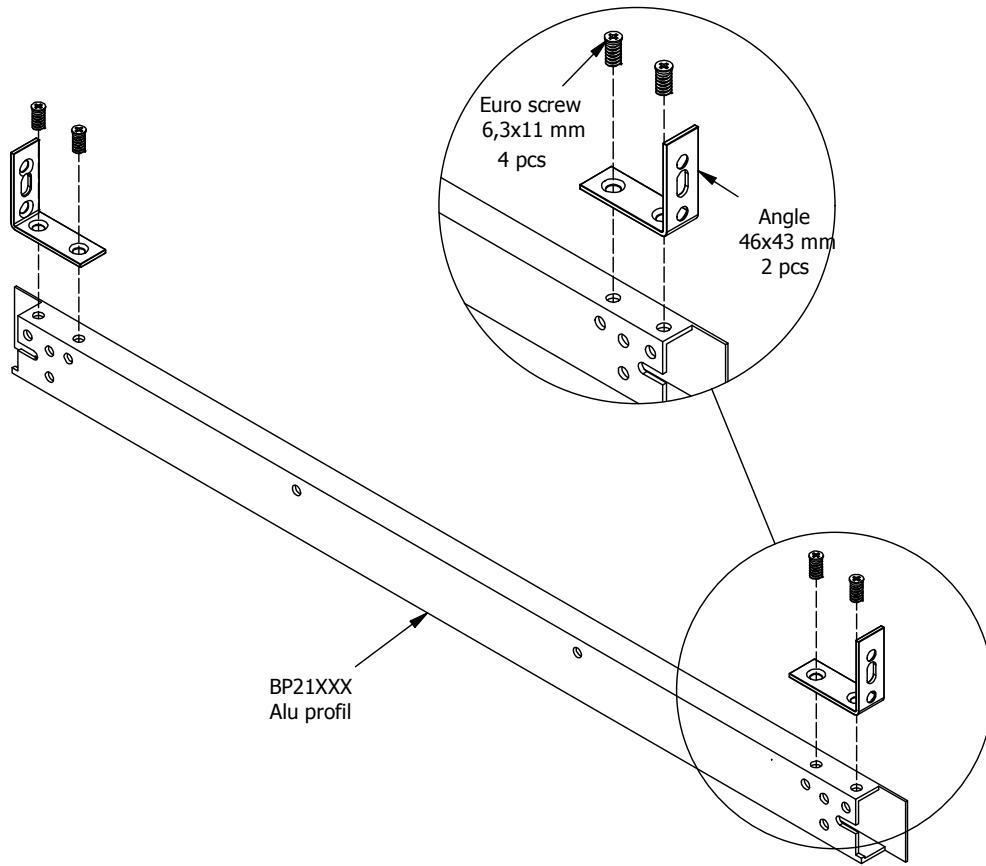


FIG. 12

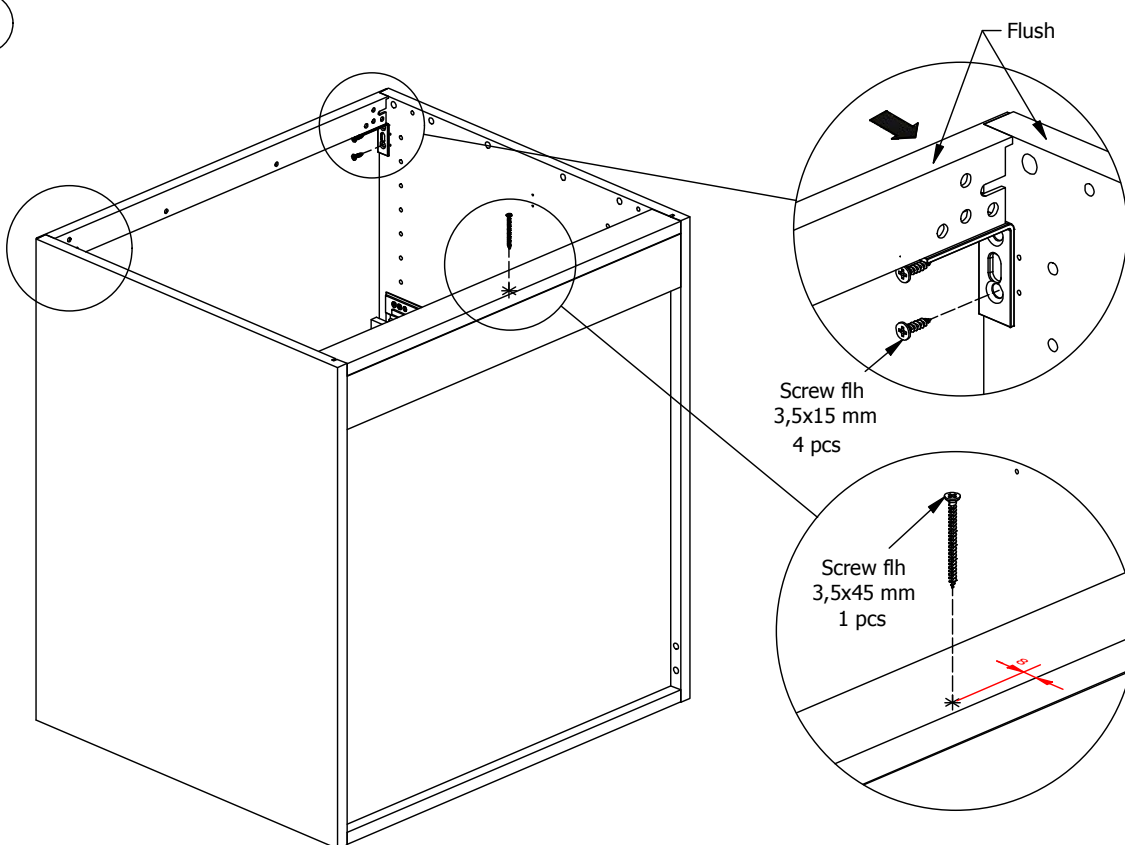


FIG. 13


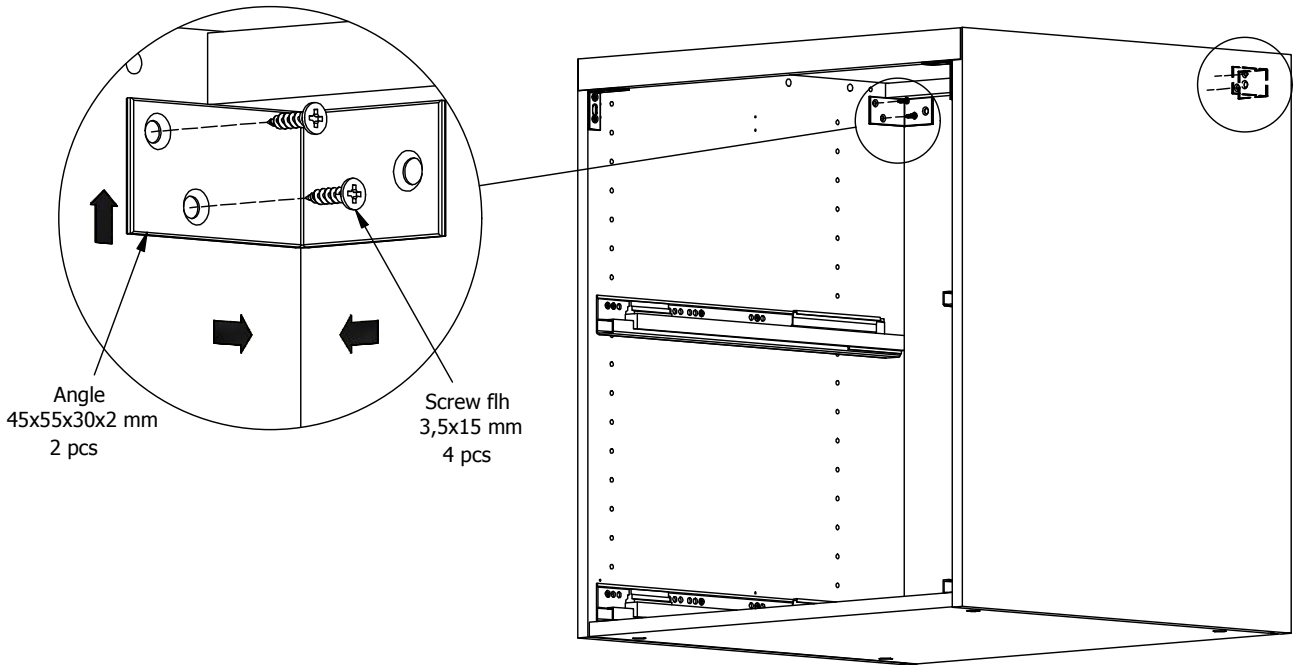


Fig 14



Installation, please read instruction SV12224

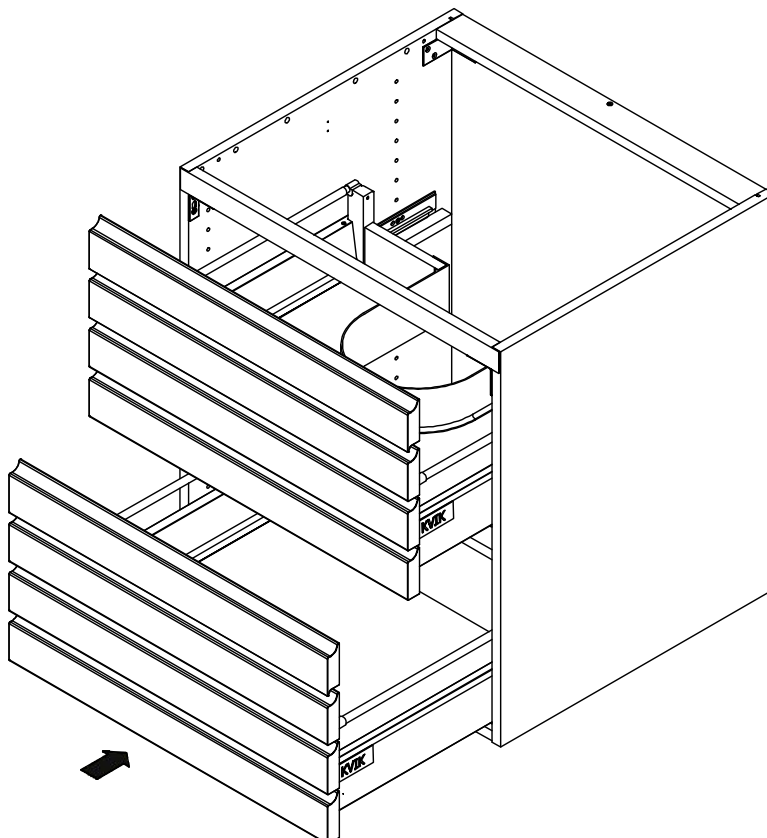