



kvik

CU626





Check out easy  
mounting of your kitchen

### Version A

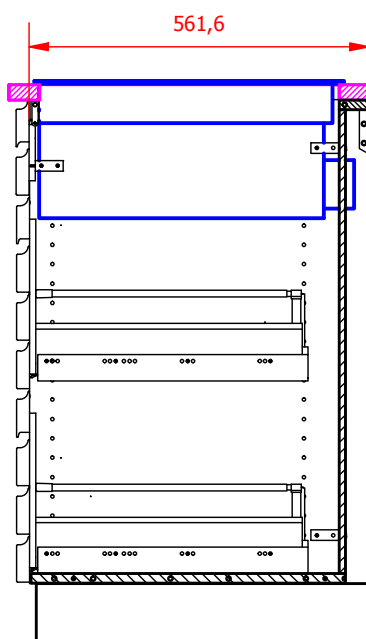

### Version B

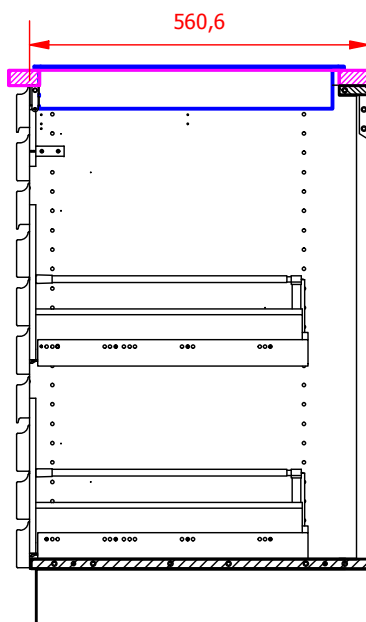

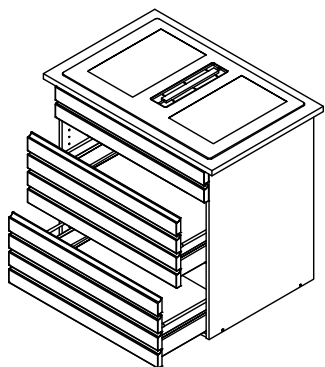

kvik




Check out easy  
mounting of your kitchen


CU626

Front with integrated handle


L01660,Cima




L01680,Cima




L01610,Cima



L01612,Cima




L03260,Cima




L03280,Cima




L03210,Cima



L03212,Cima




L03260,Cima




60 cm

L03280,Cima




80 cm

L03210,Cima




100 cm

L03212,Cima



120 cm

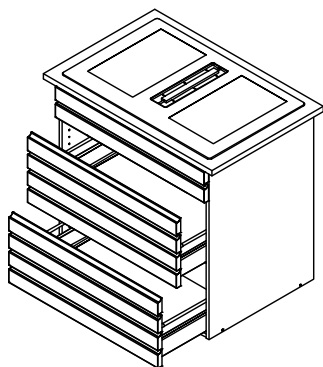







kvik



Check out easy  
mounting of your kitchen

CU626

DU80,\*\*\*,000 / 176

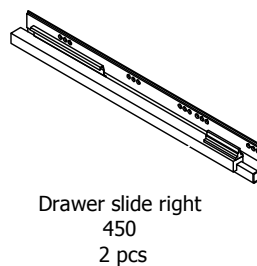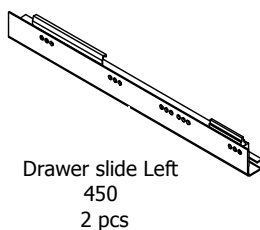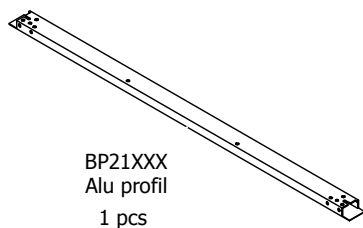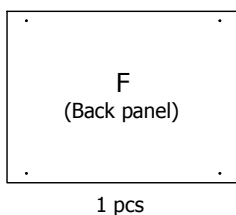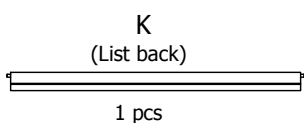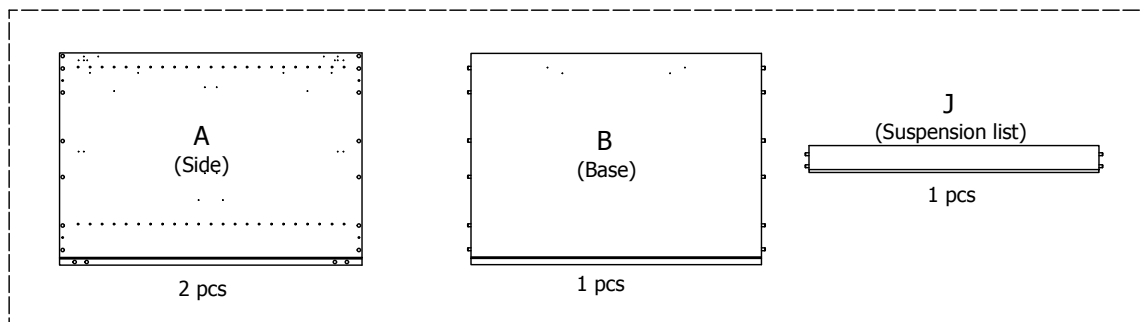

BP00003-BP01905-BP00491(3x)

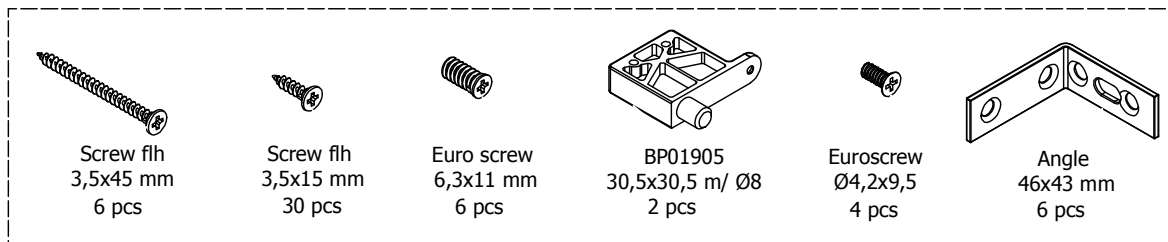


FIG. 1 Side Left

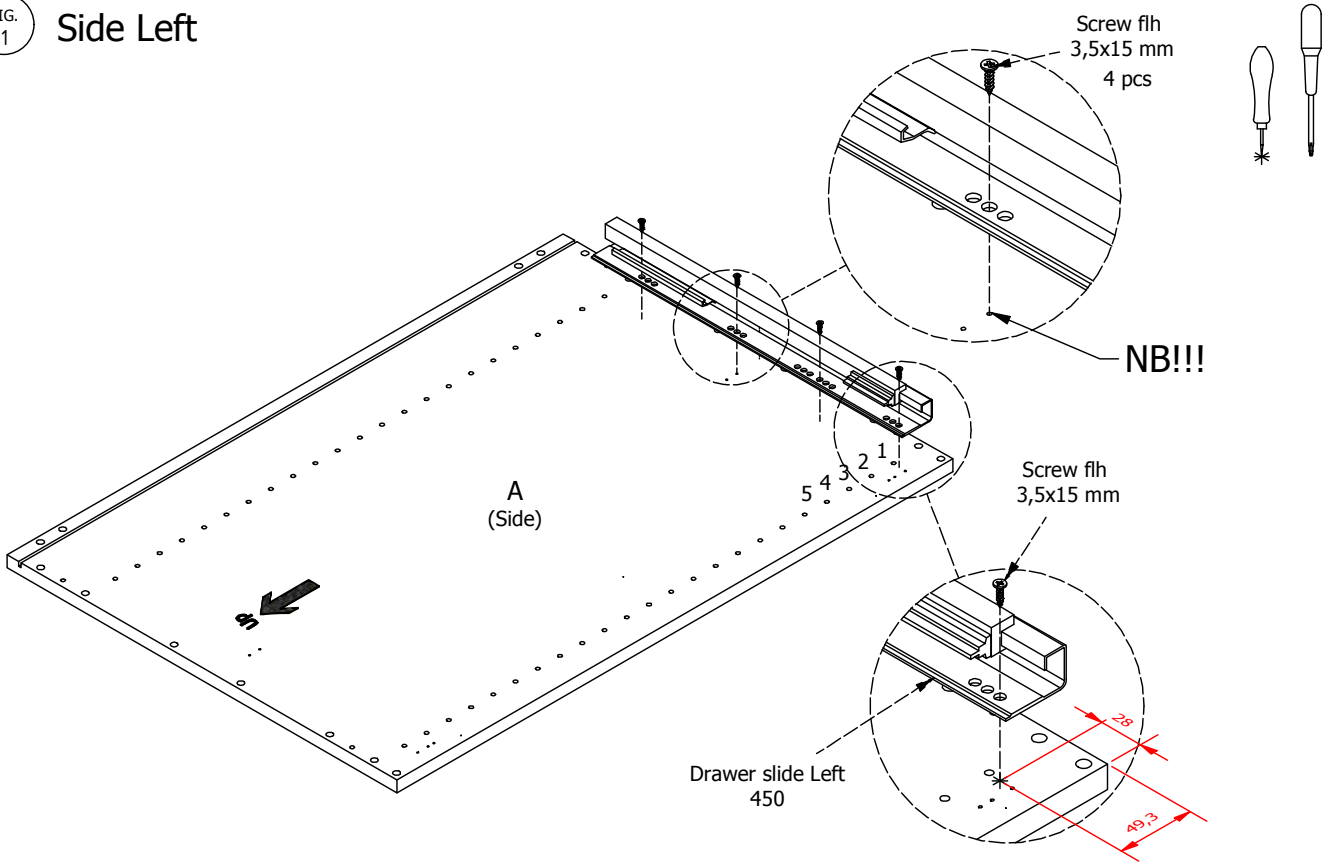


FIG. 2 Side Right

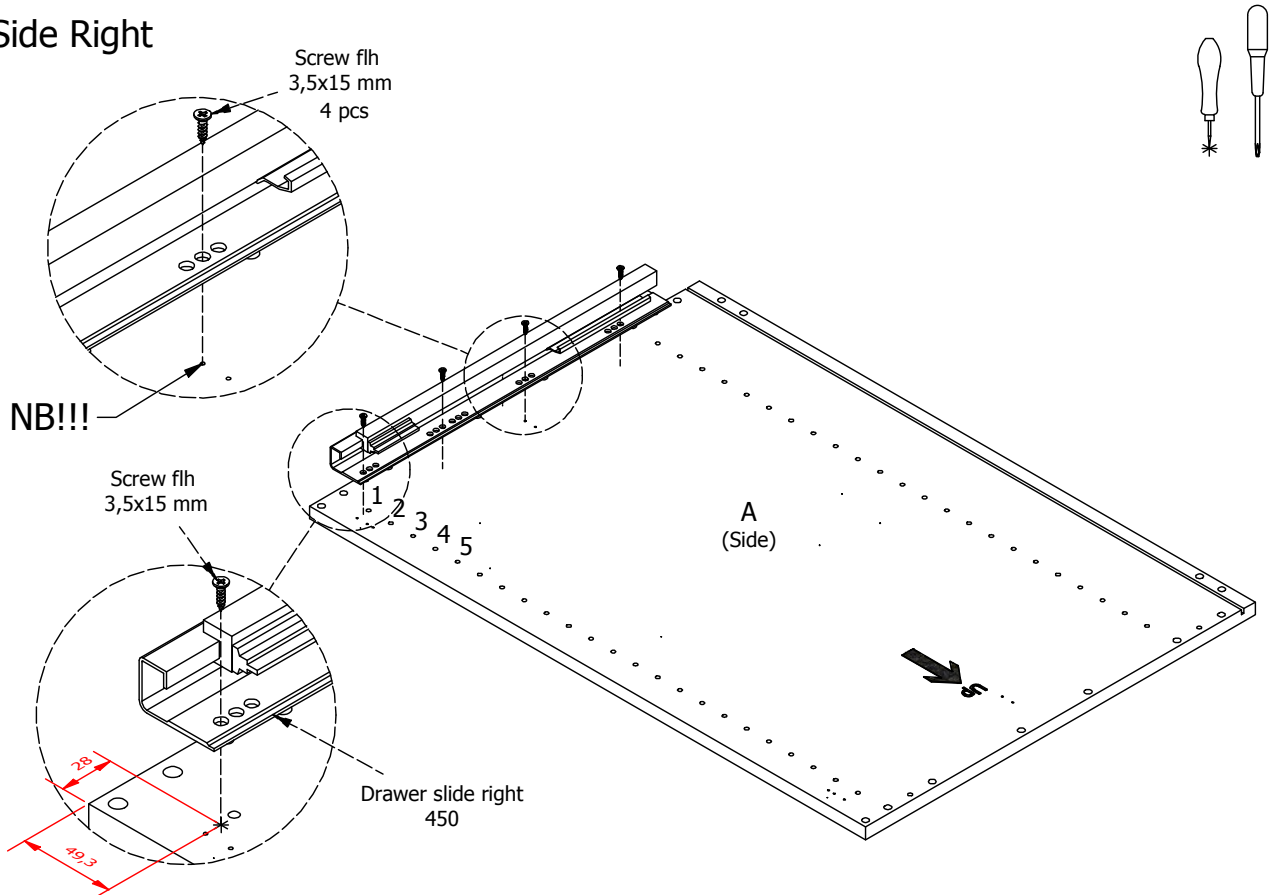


FIG. 3 Side Left

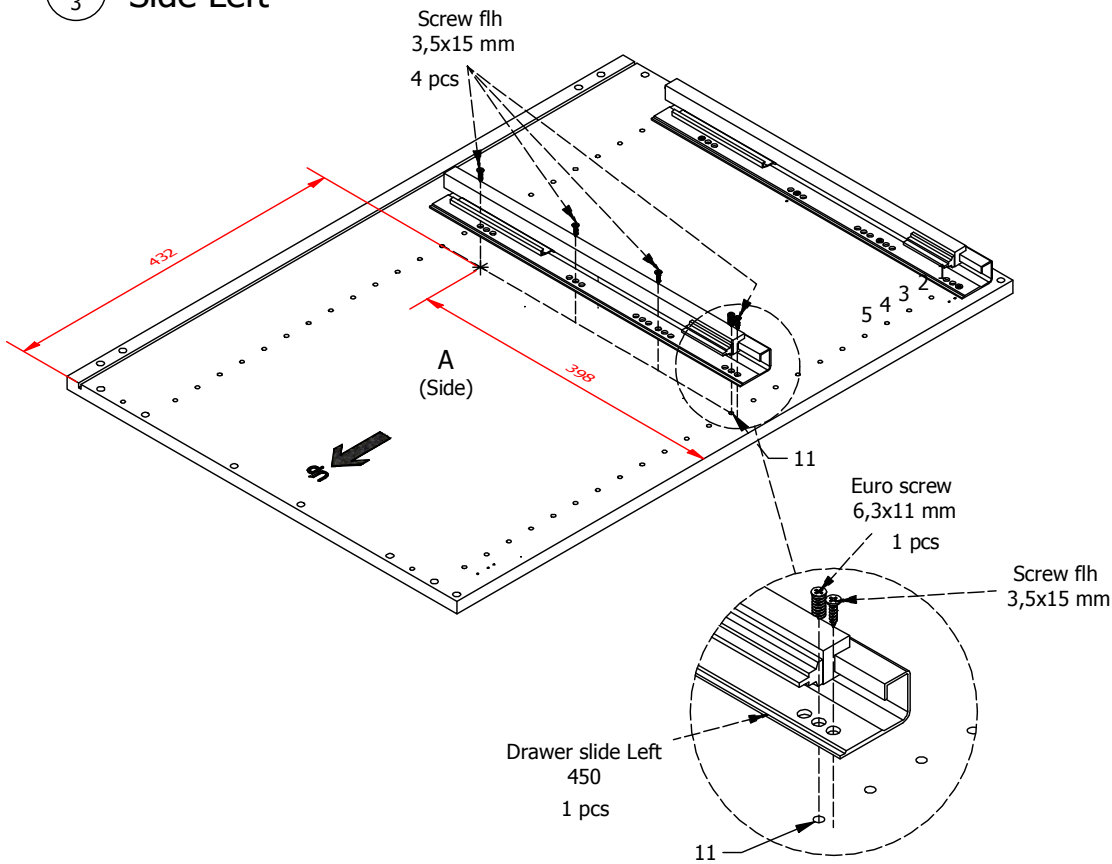


FIG. 4 Side Right

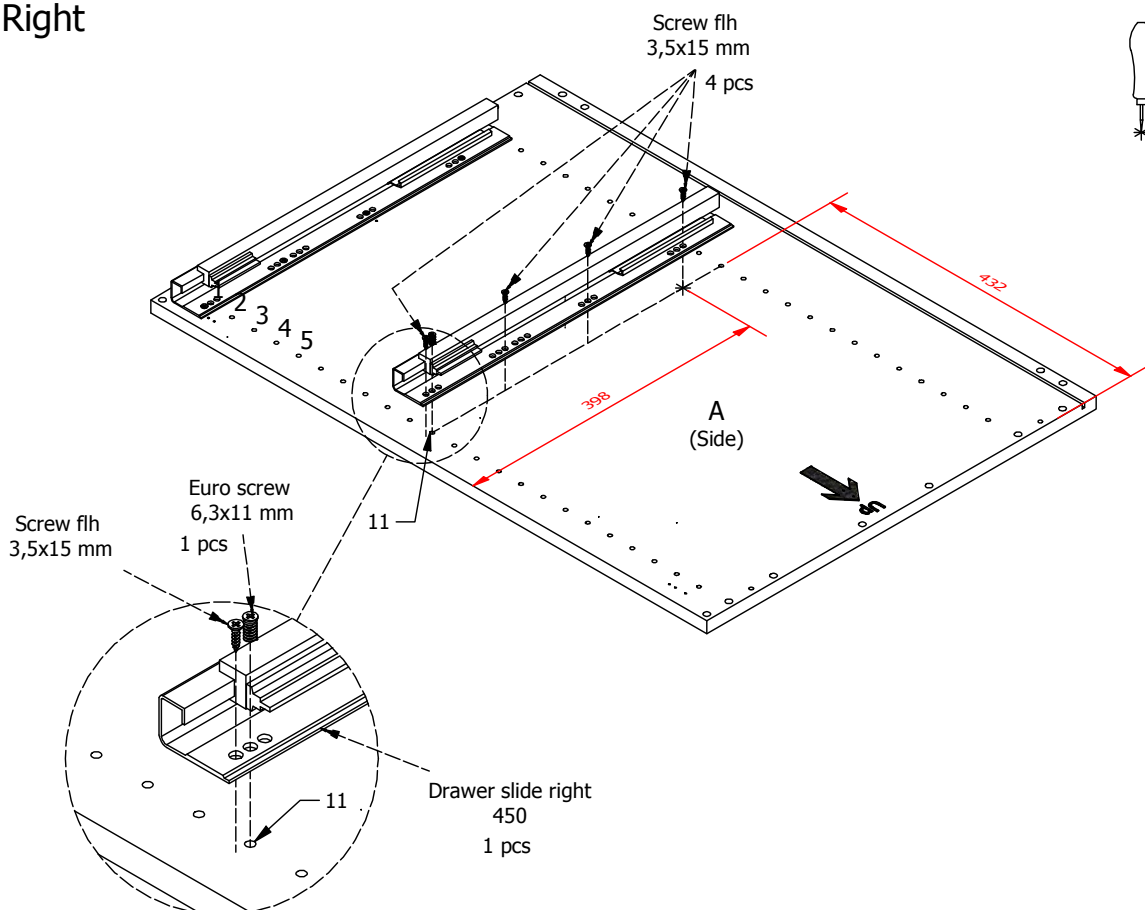


FIG. 5 Side Left

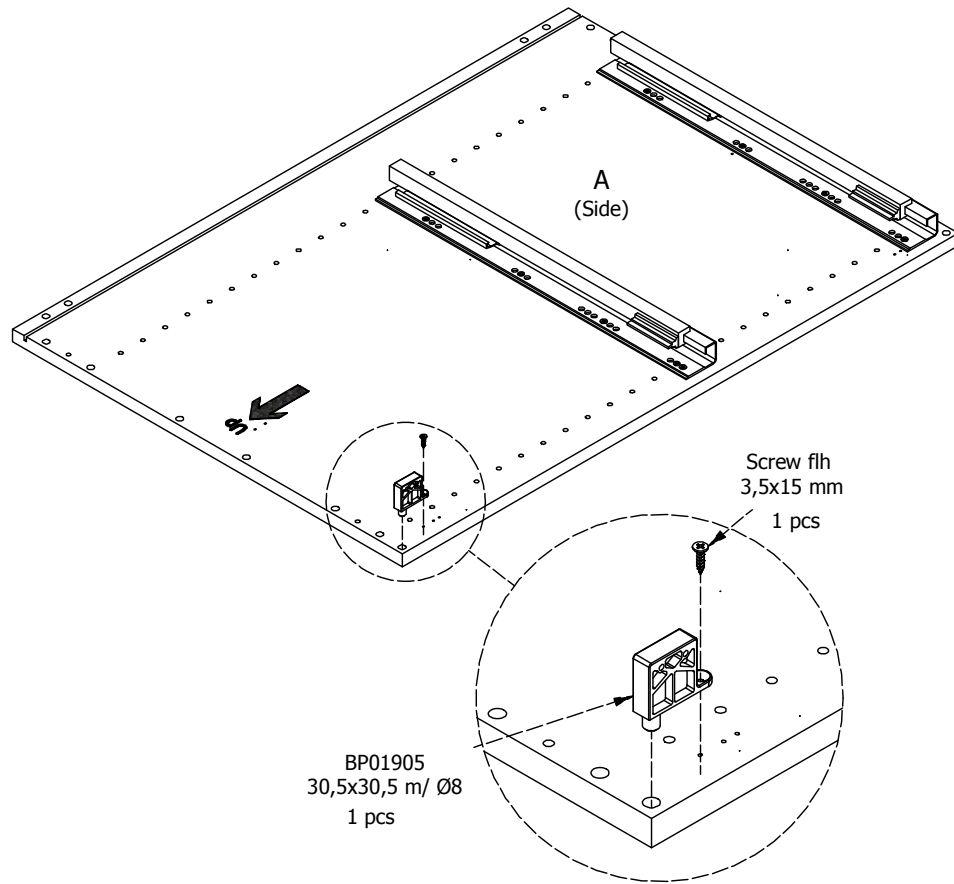


FIG. 6 Side Right

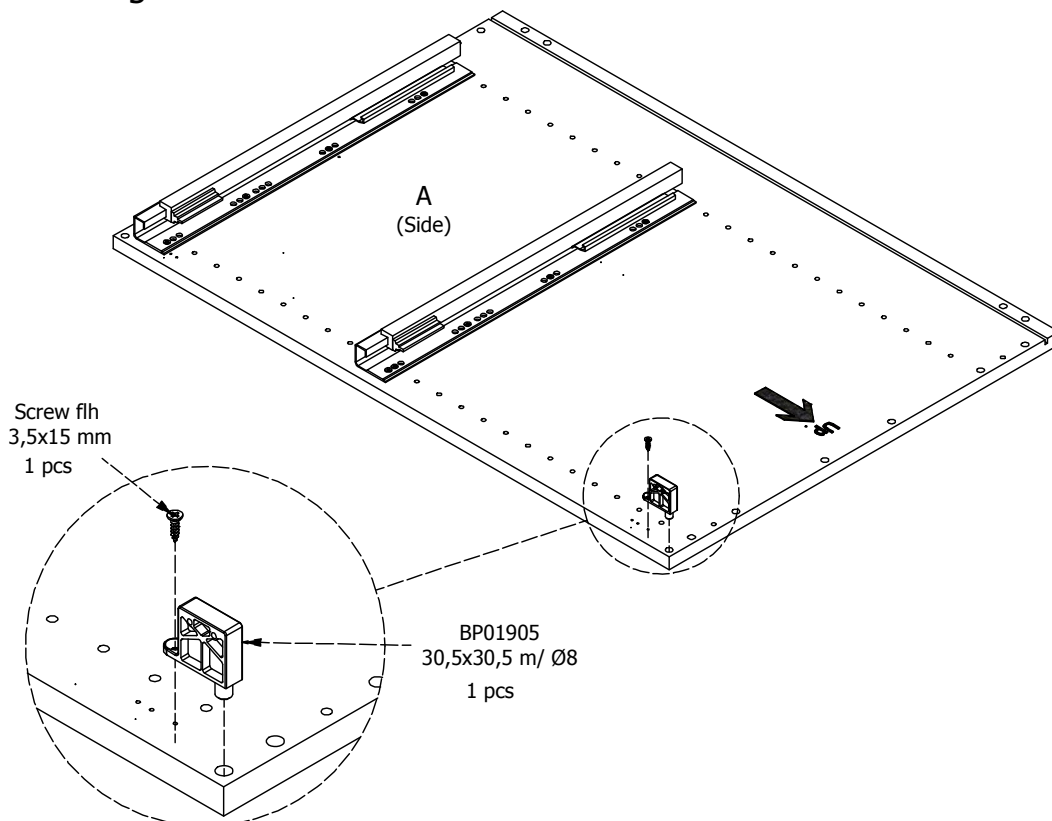


FIG. 7

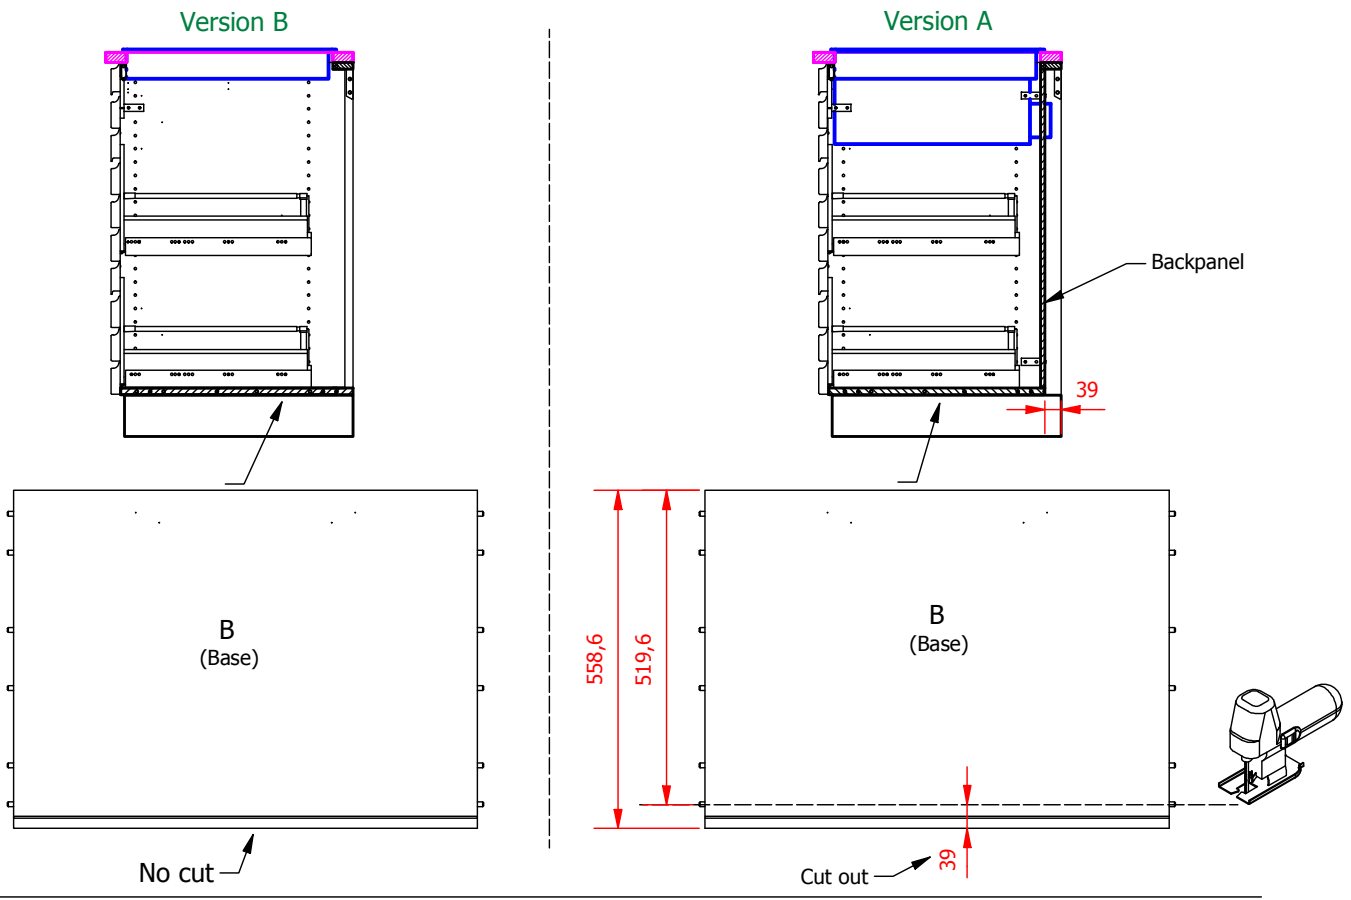


FIG. 8

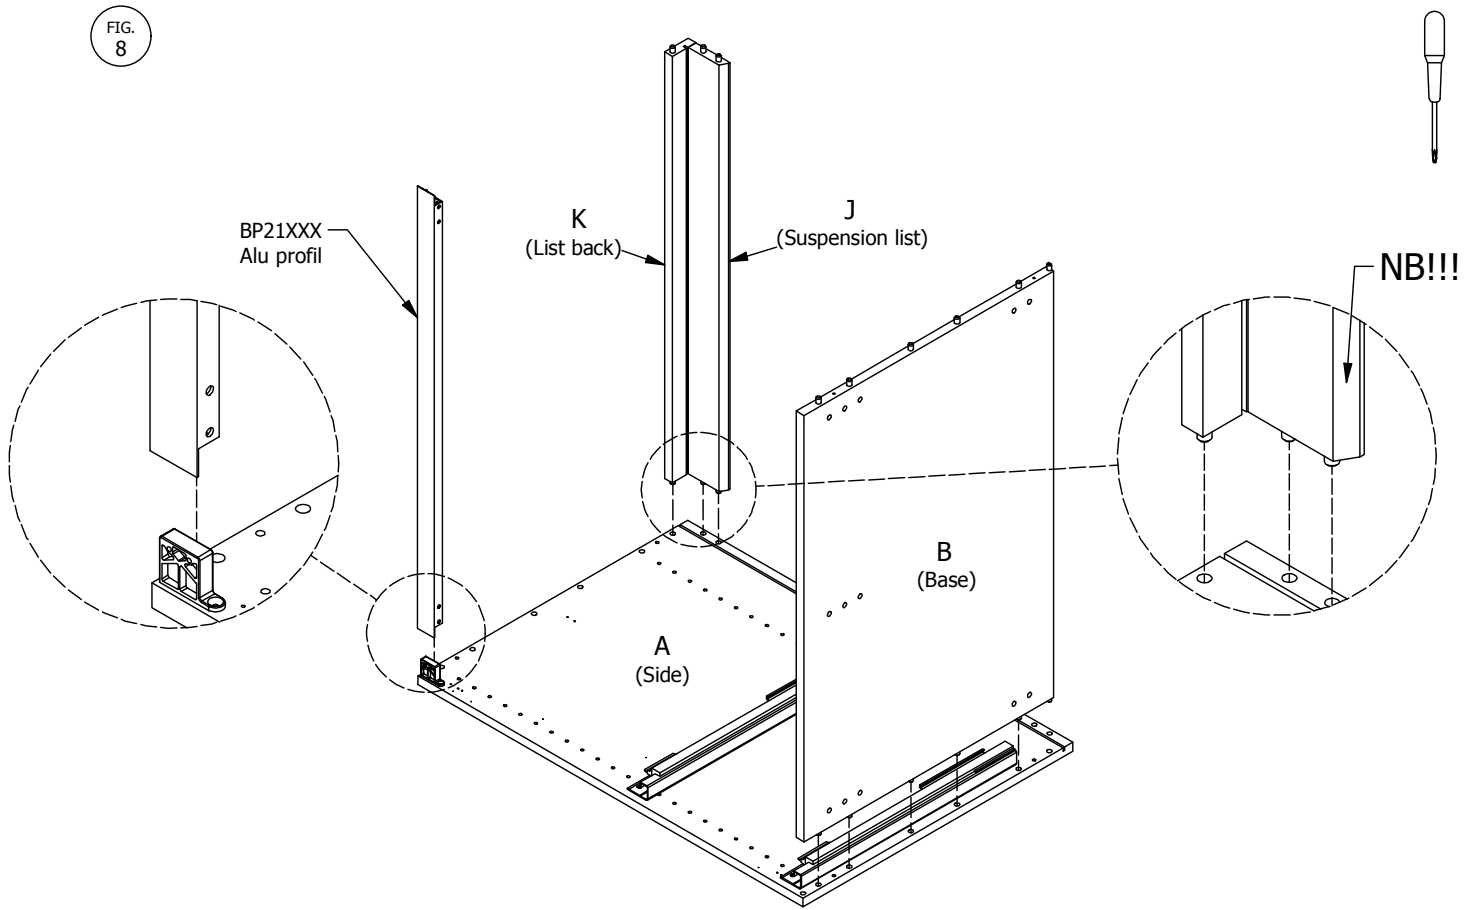


FIG. 9

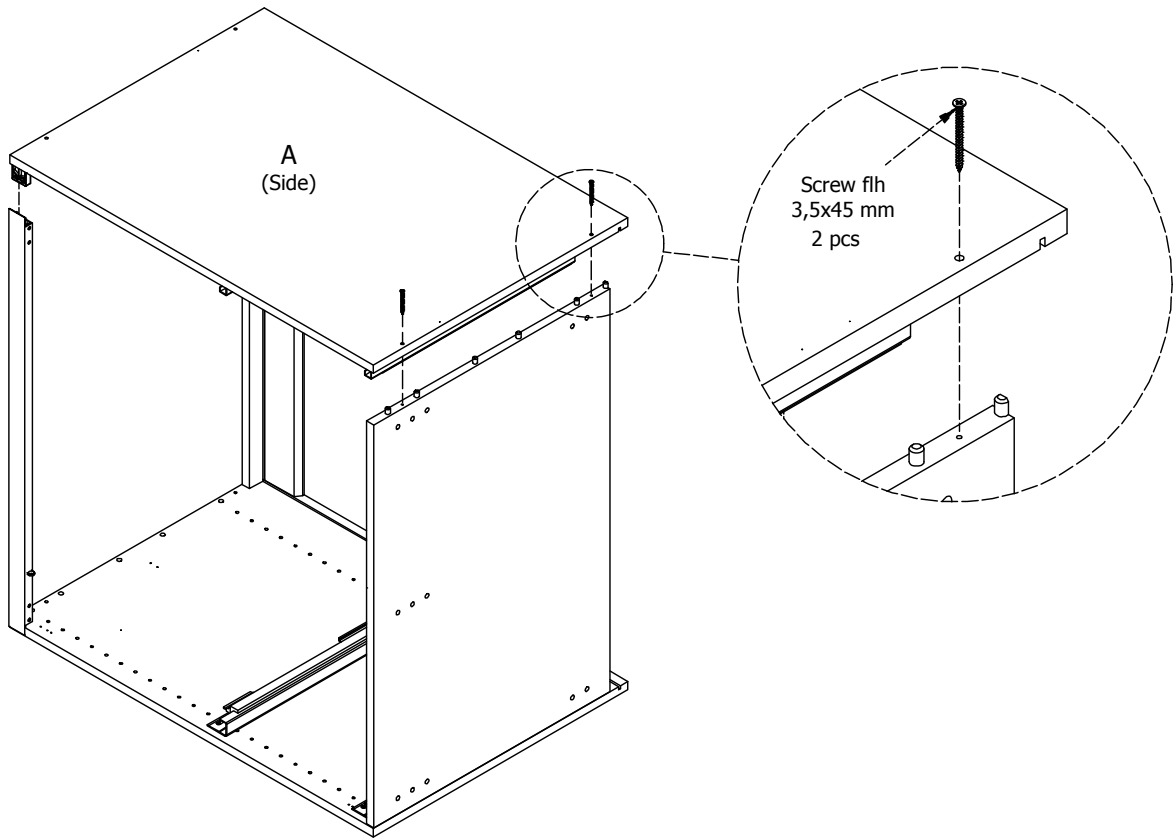


FIG. 10

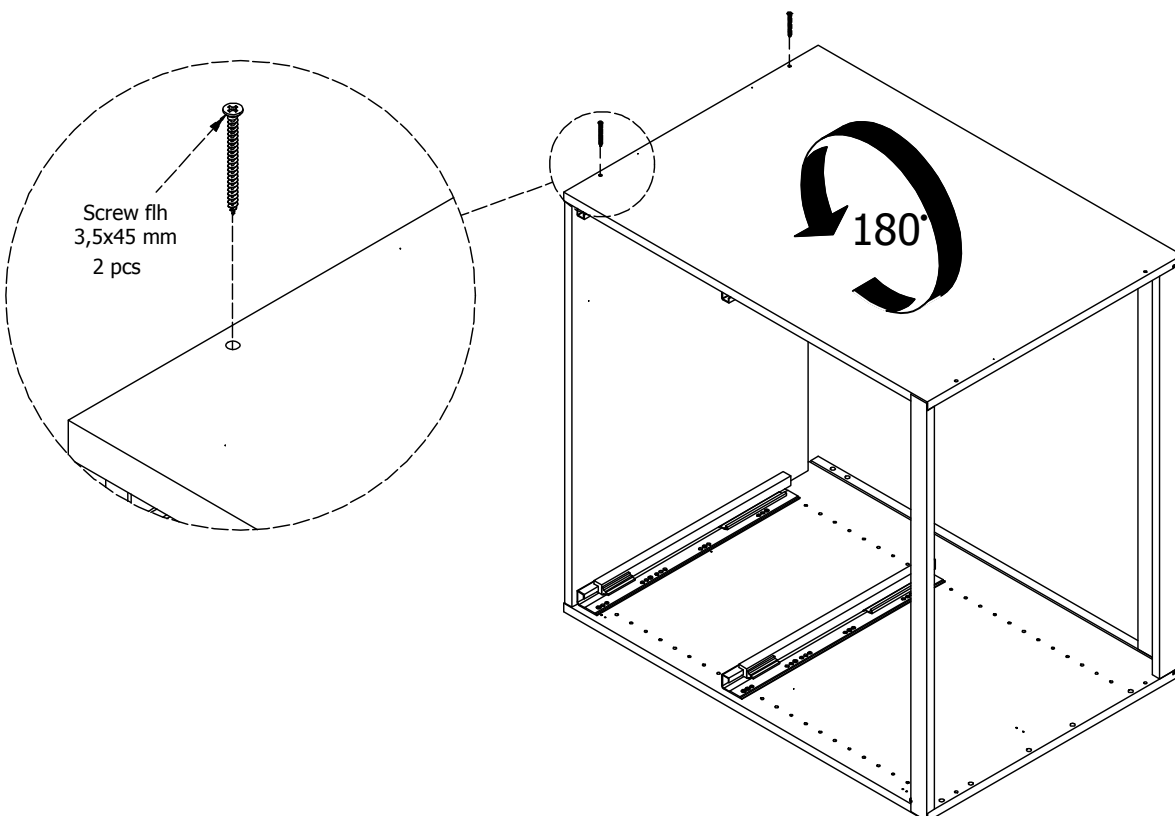




FIG. 11

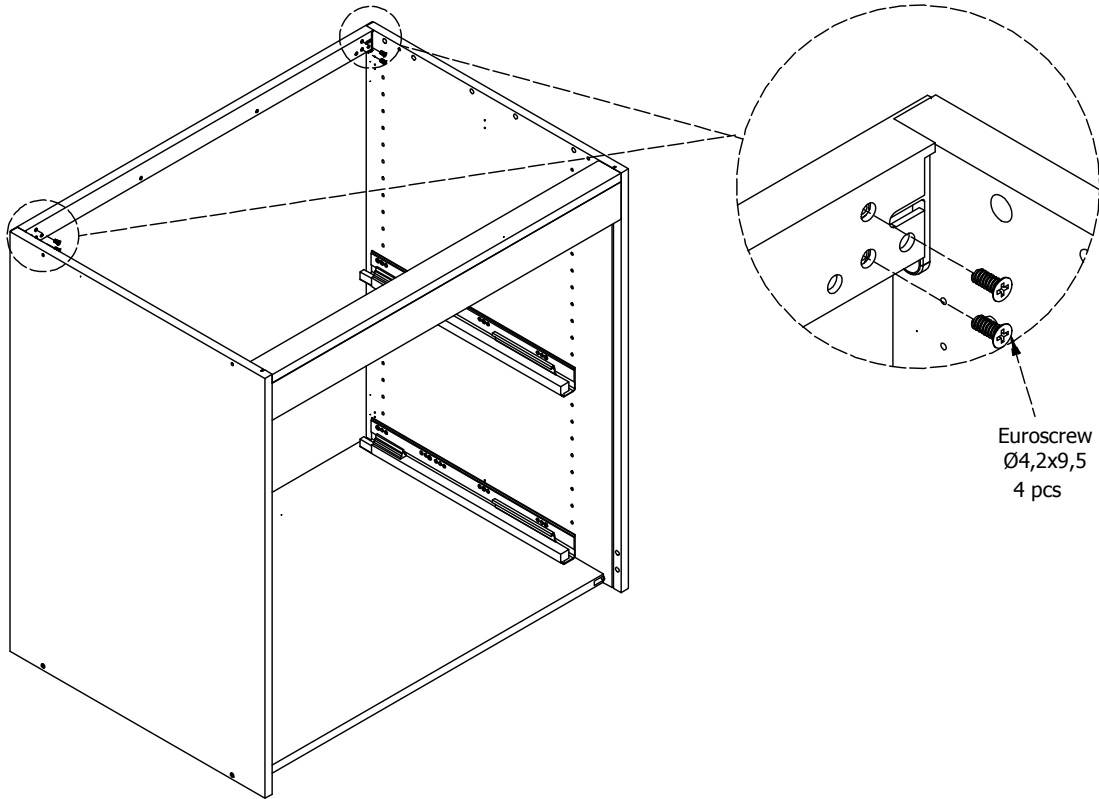


FIG. 12

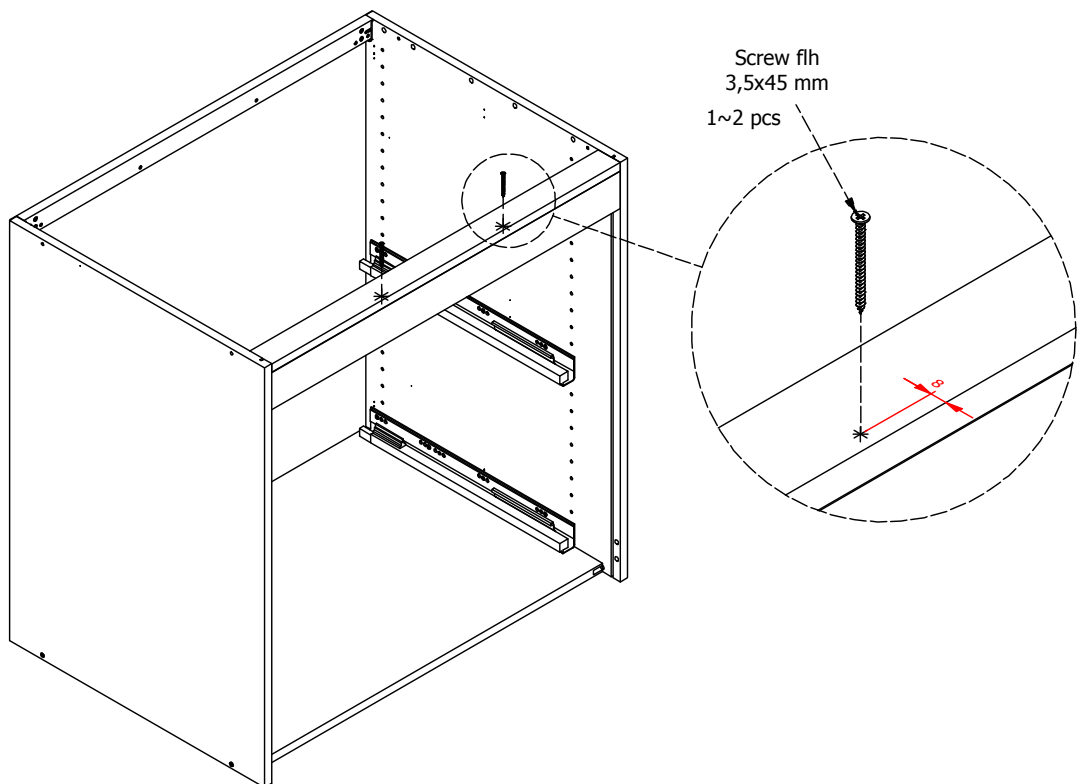


FIG. 13

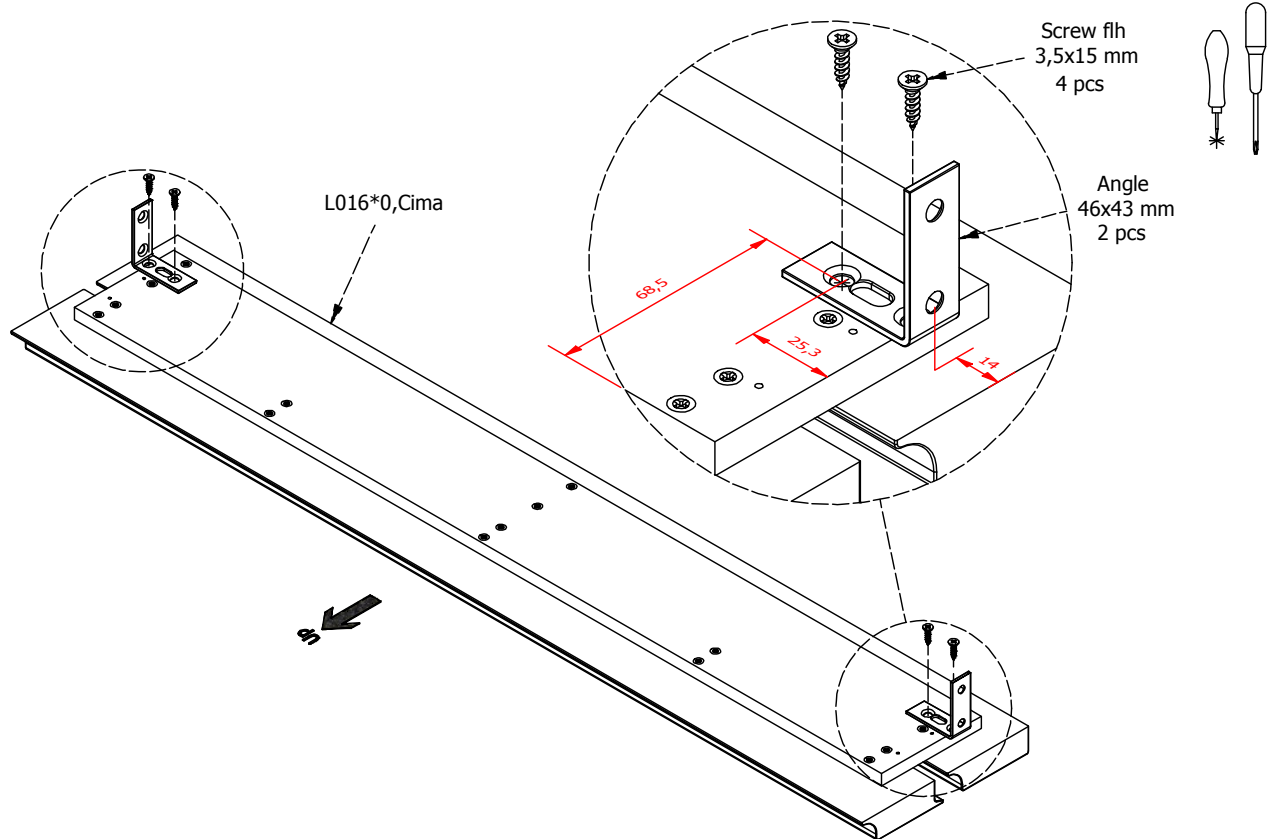


Fig 14


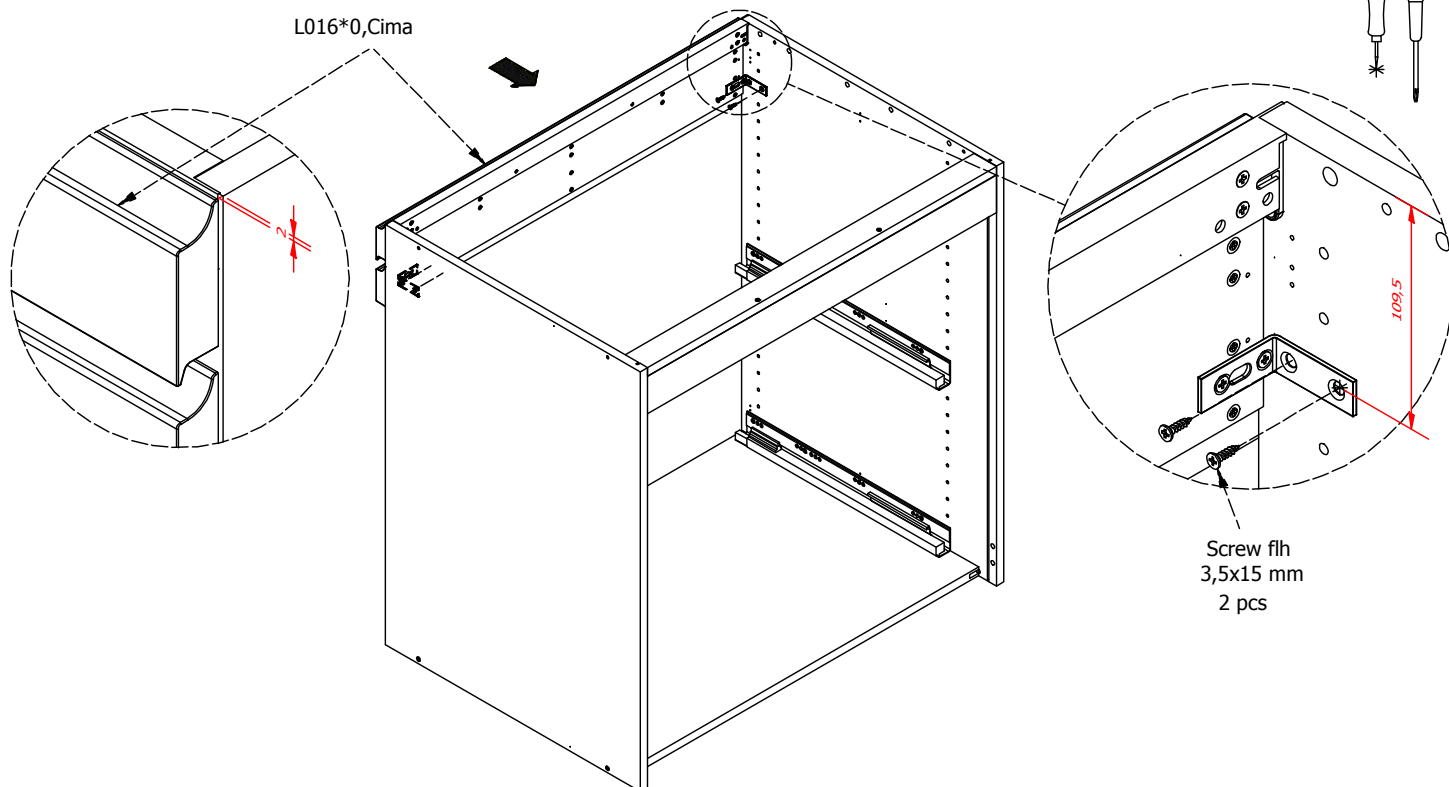


Fig 15

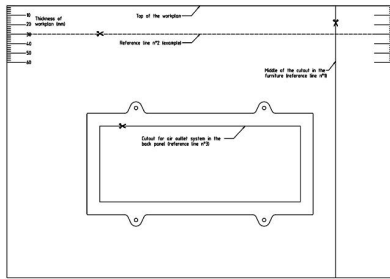

Notice:  
Use the template supplied with the hob,  
to mark lines on the backpanel

BSH - Siemens template

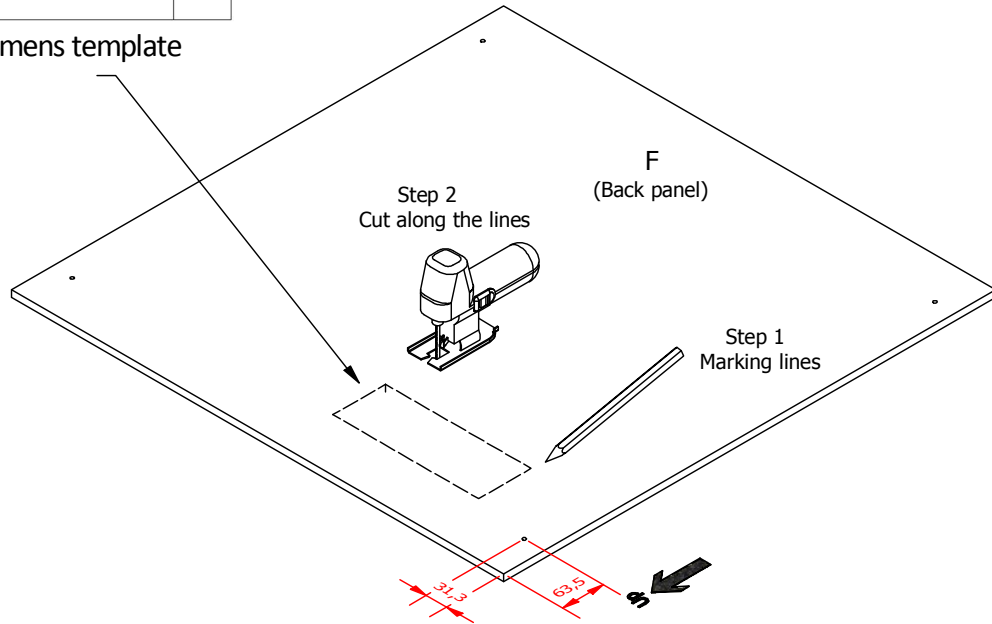
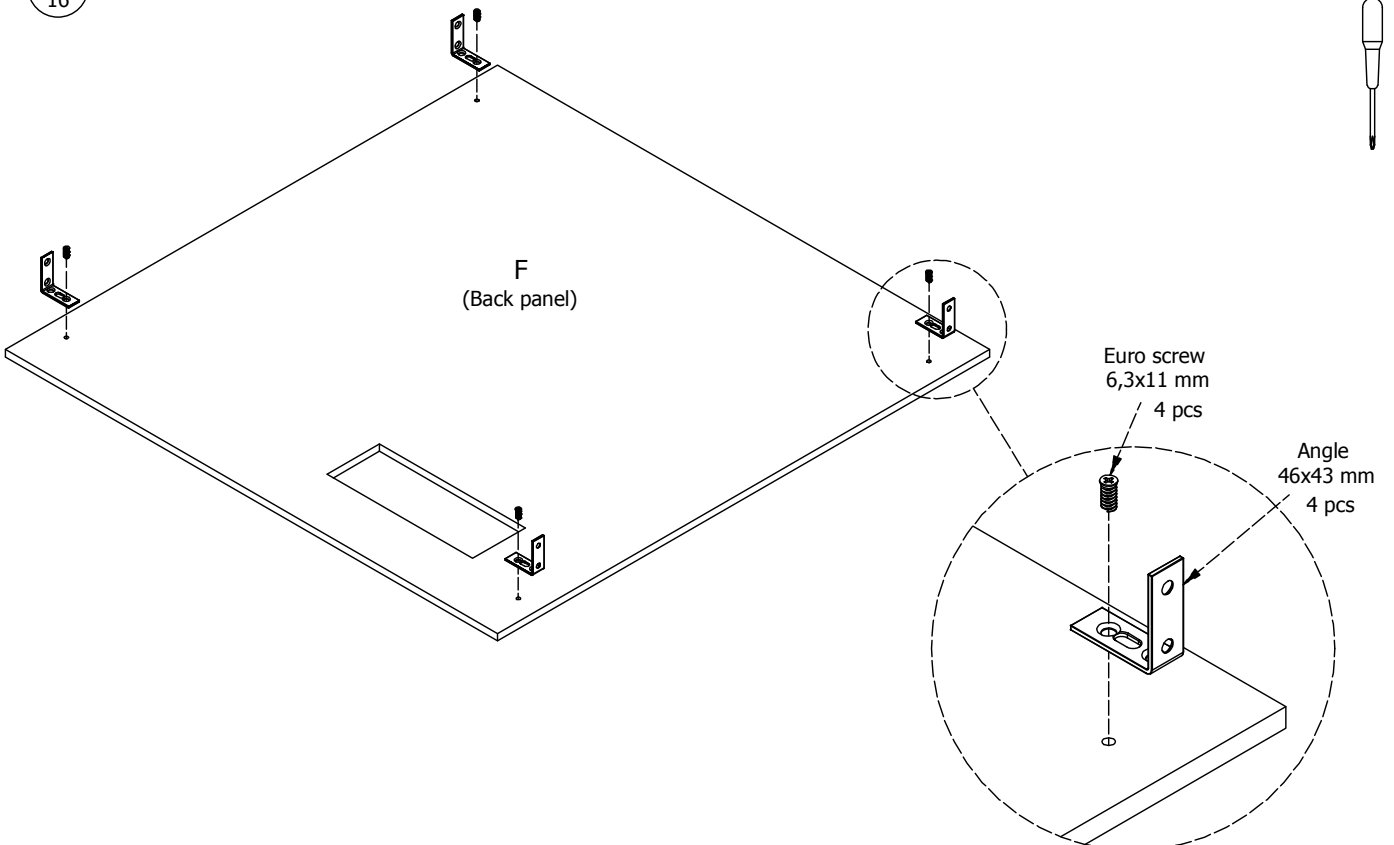
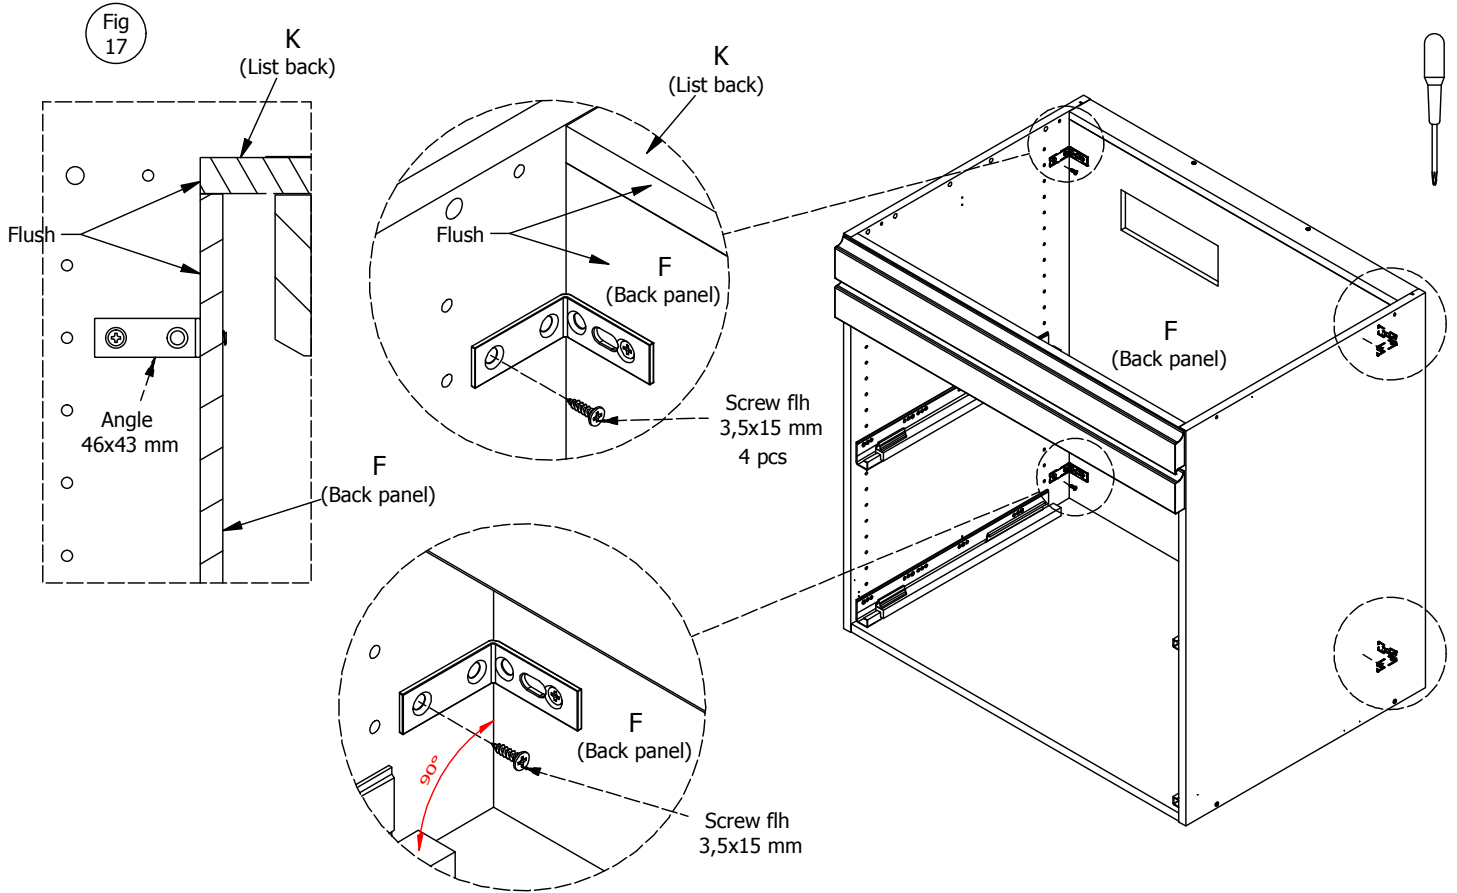


Fig 16





**Fig 18**

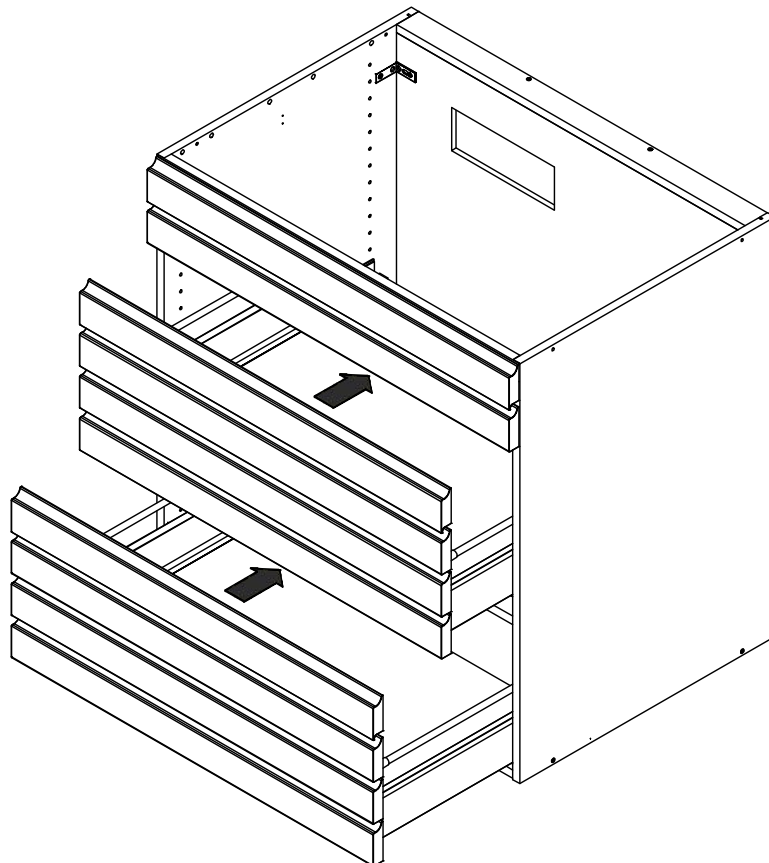


Fig  
19

