


**kvik** 

**DBO6410**





Check out easy  
mounting of you bath

Front without integrated handle

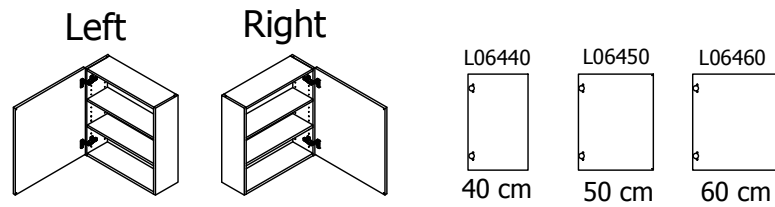

Front with integrated handle

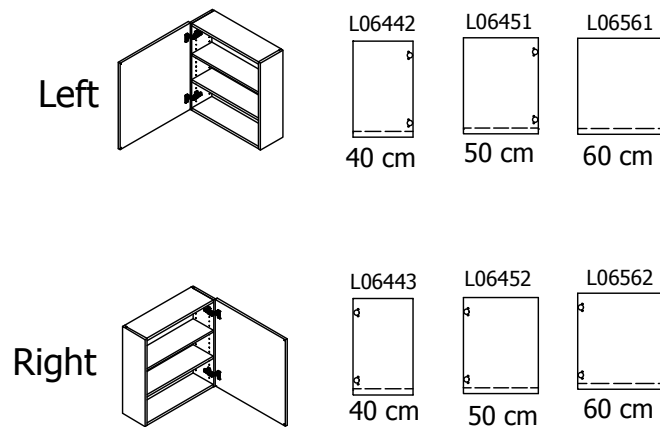

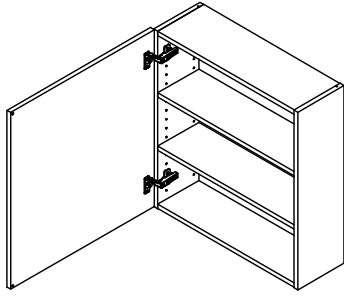



**kvik**




Check out easy  
mounting of you bath

**DBO6410**

BO64,\*\*\*,150 / 176

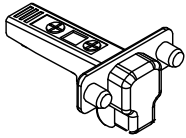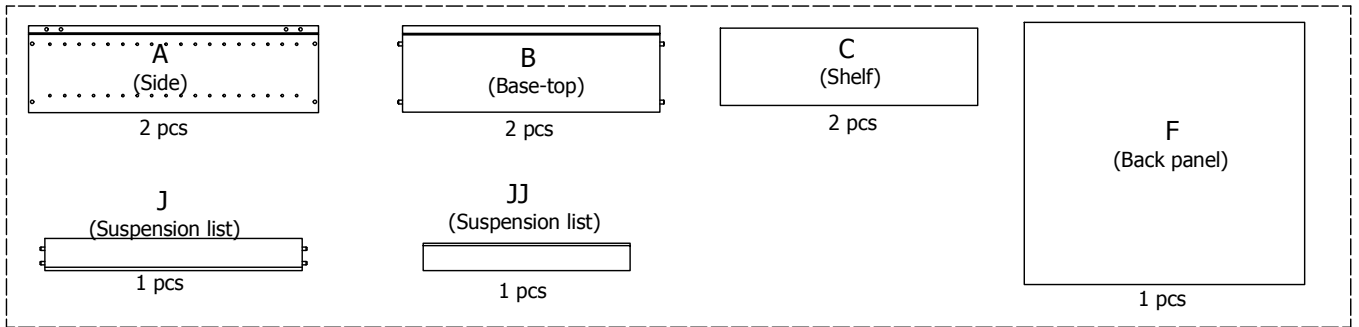

BP00418  
Hinge 107 degrees  
2 pcs



BP00417  
Mounting plate  
2 pcs



Glue  
15 gr  
1 pcs

BP00205-BP00250

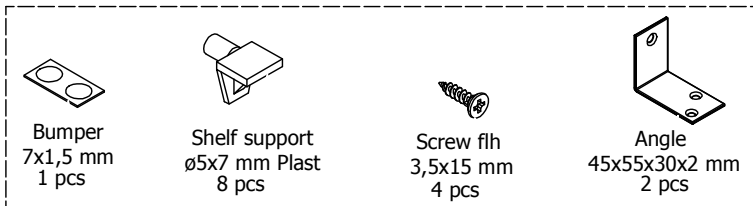


FIG. 1

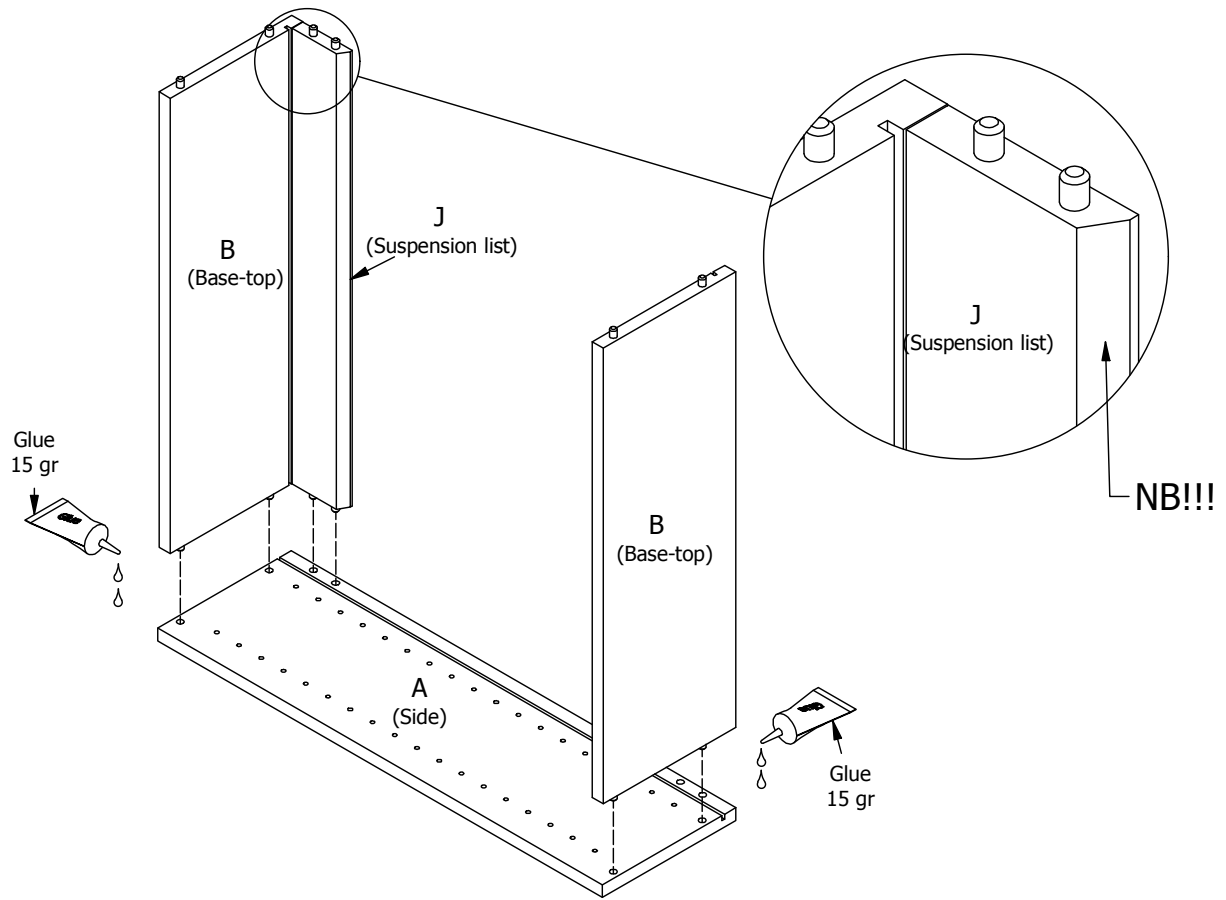


FIG. 2

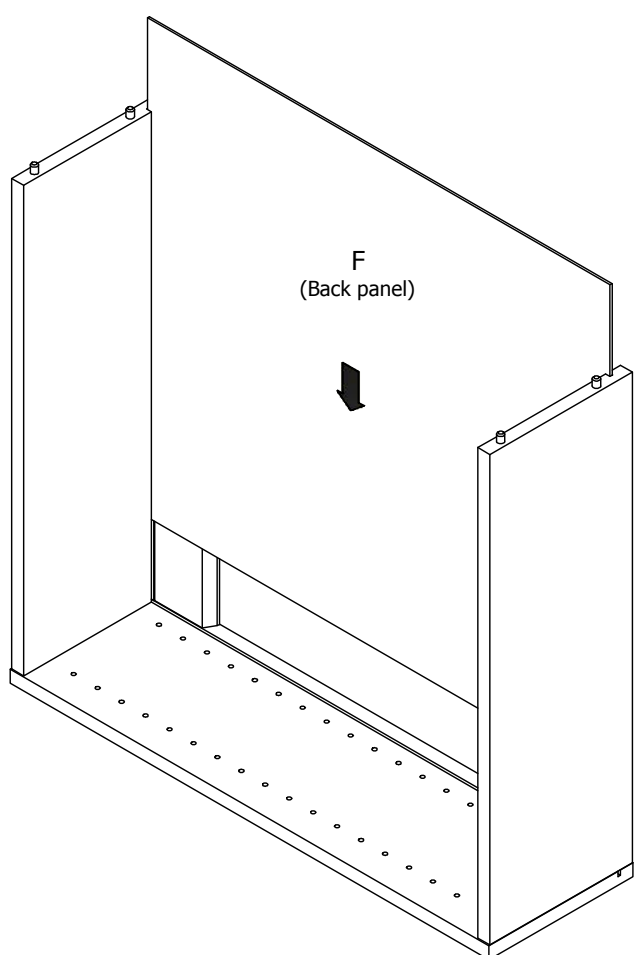


FIG. 3

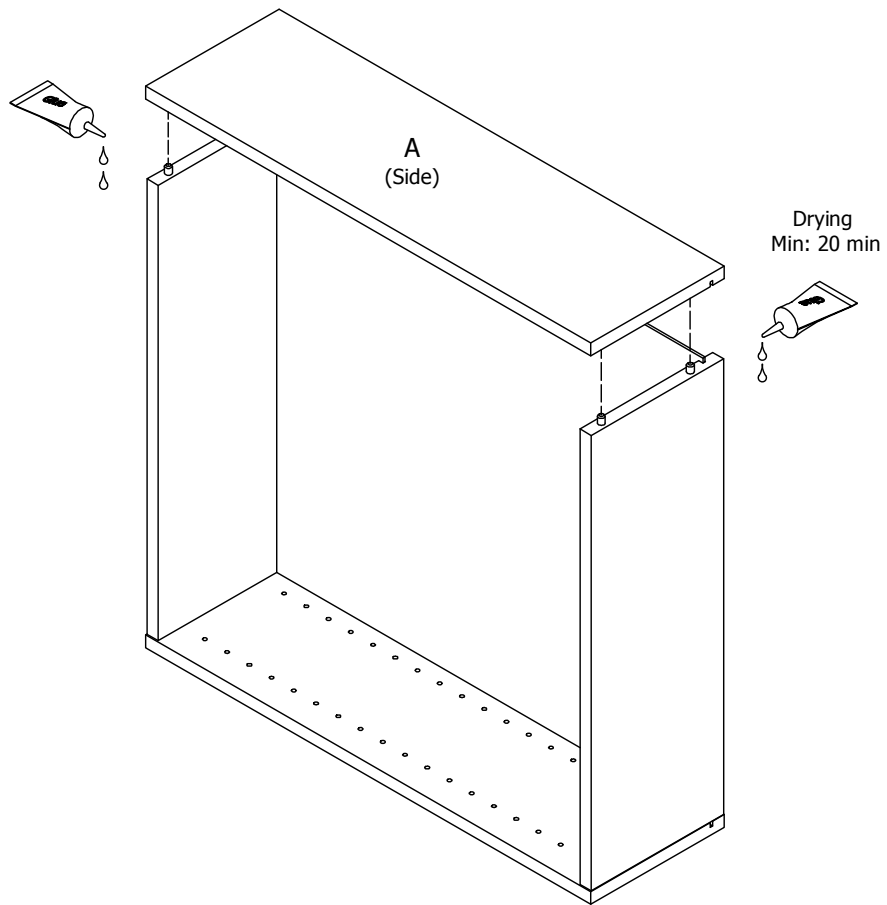


FIG. 4

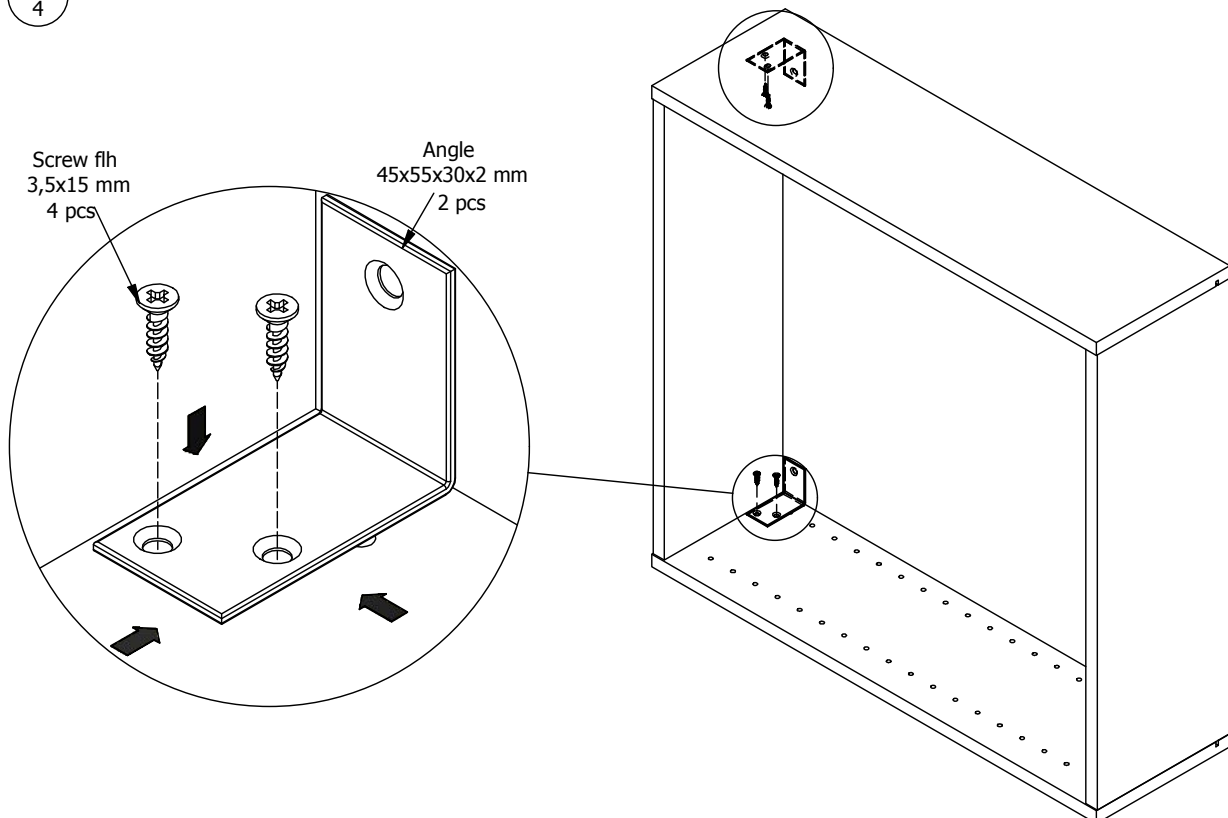


FIG. 5

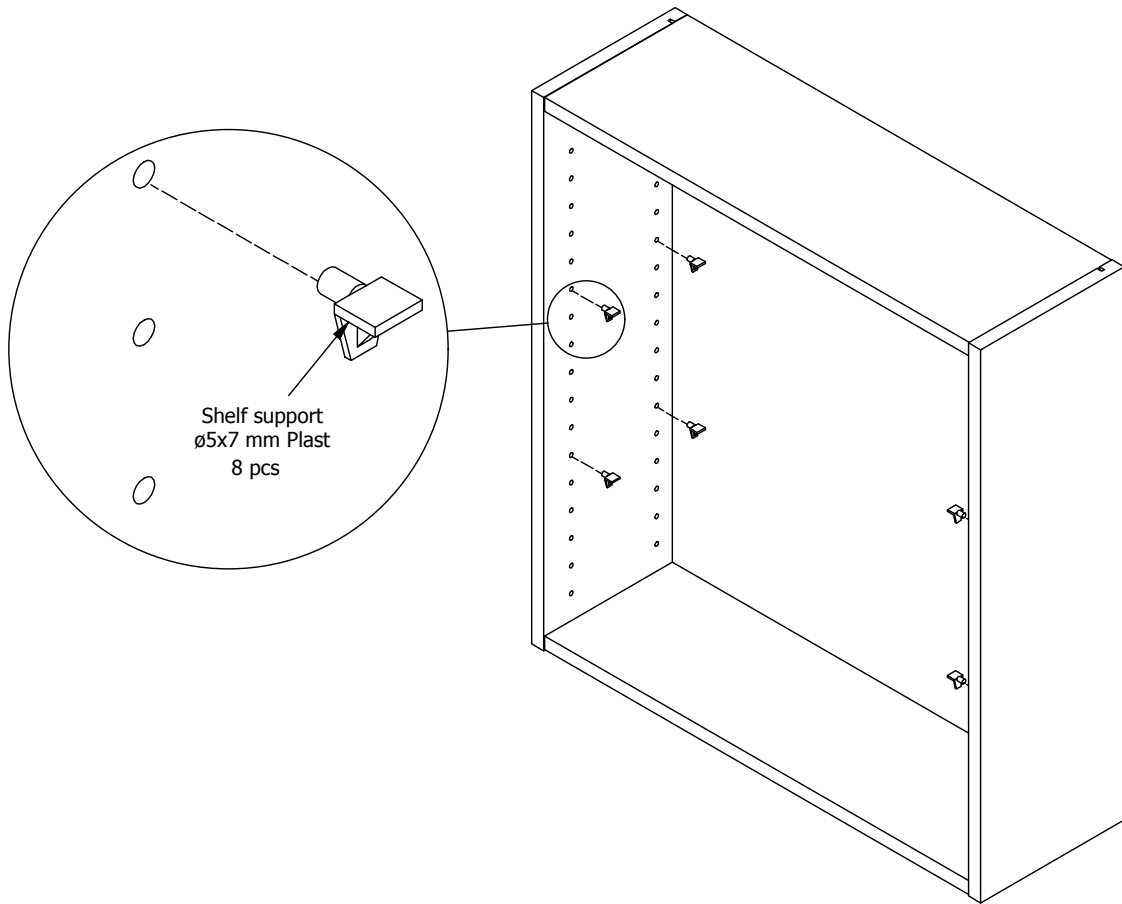


FIG. 6

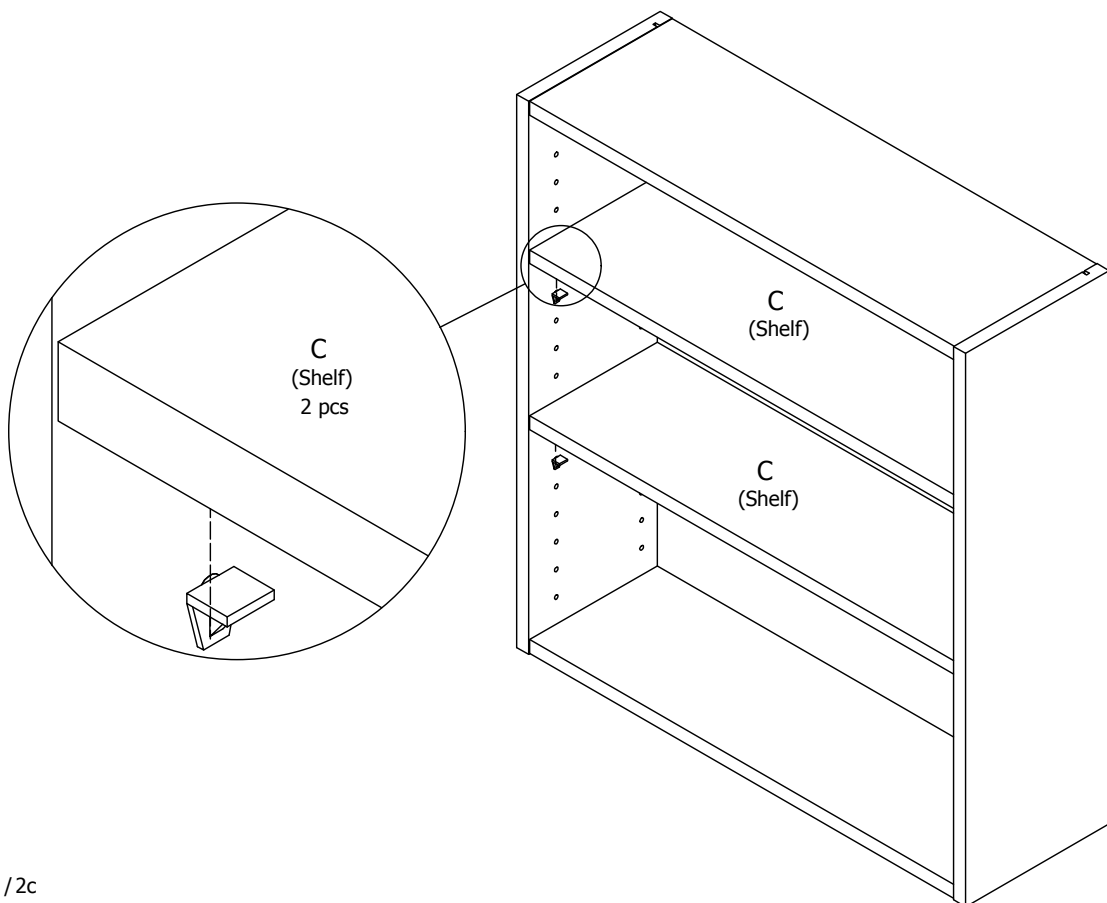


FIG. 7

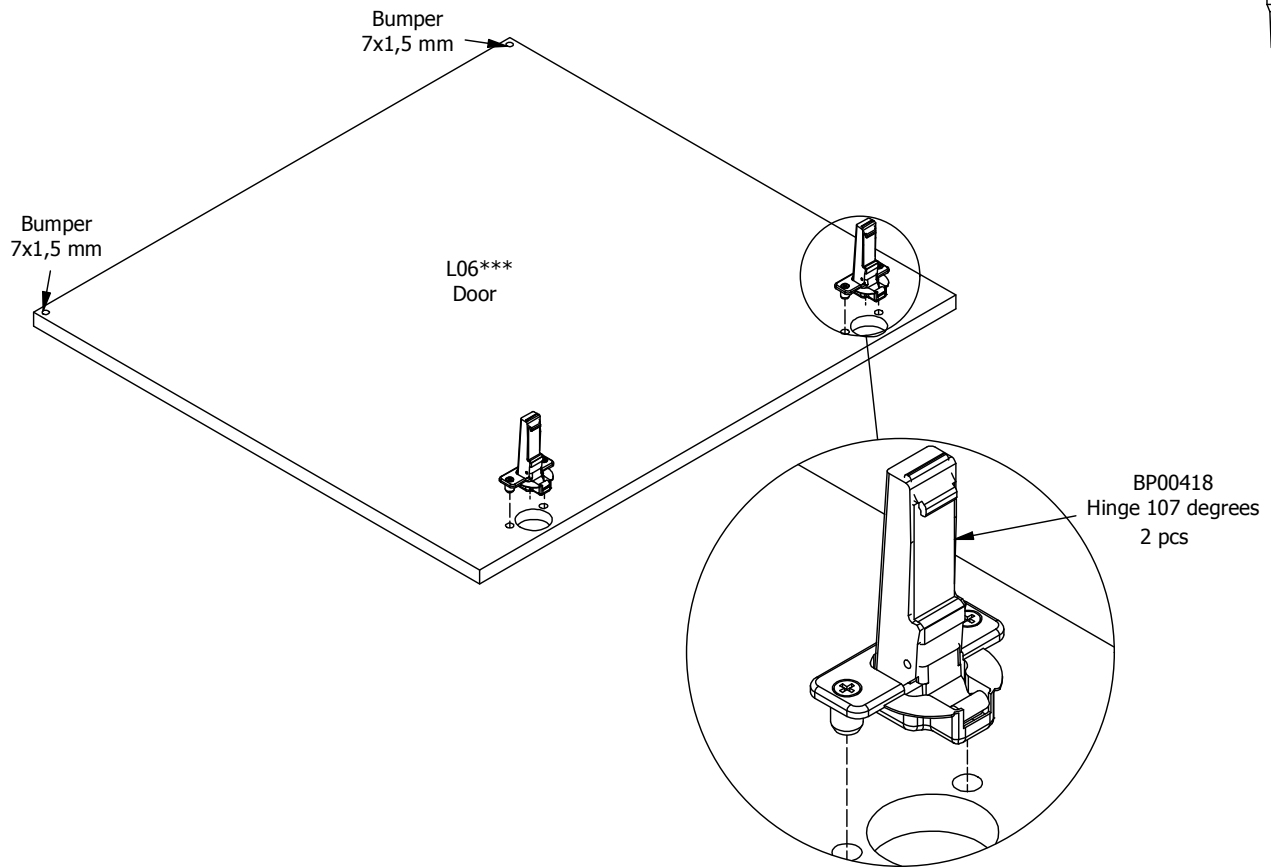


FIG. 8





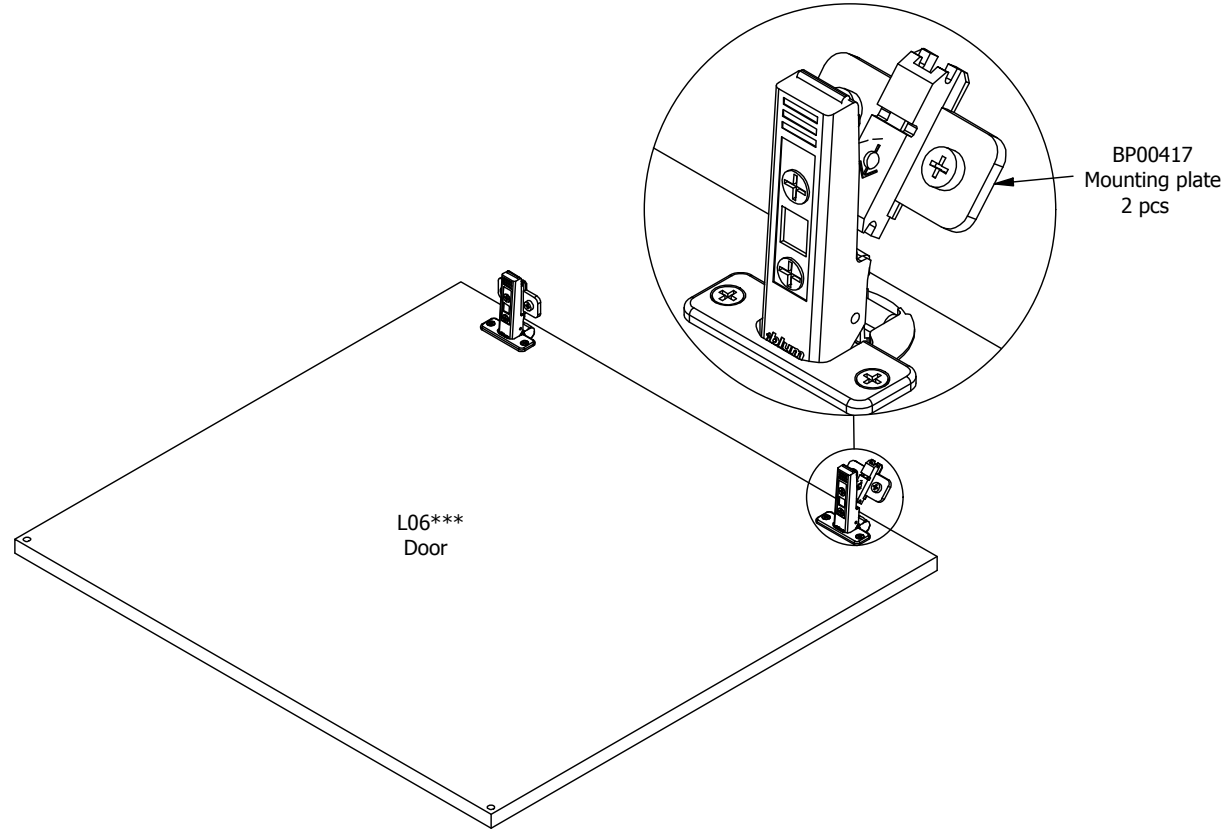


FIG. 9

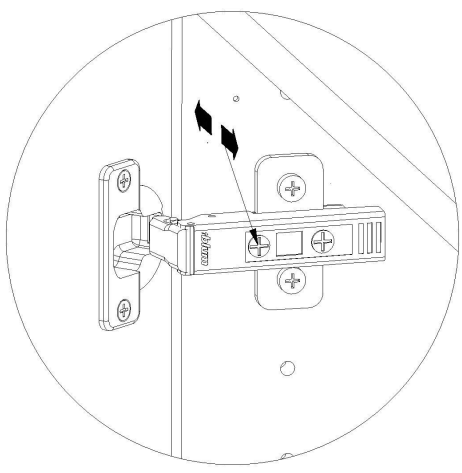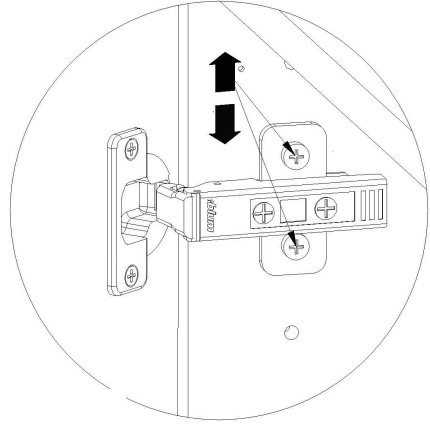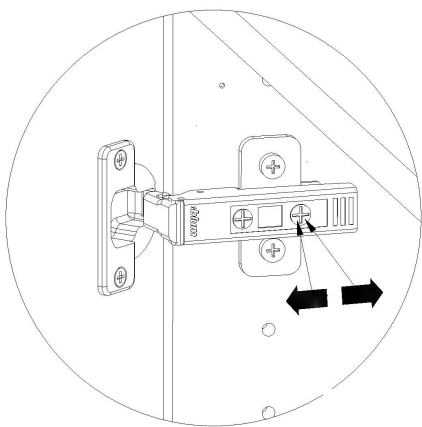

---

Installation, please read instruction SV12224

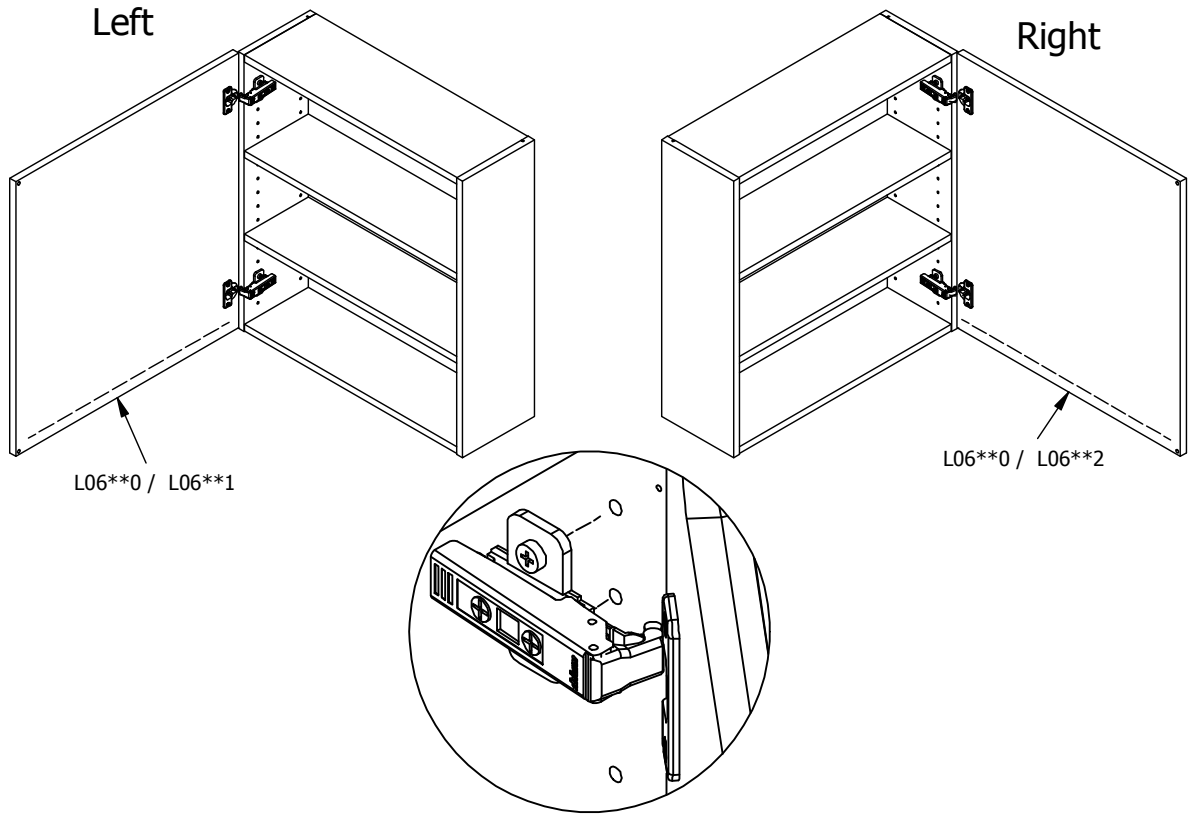