



kvik






DBU6400


Check out easy
mounting of you bath

Front without integrated handle

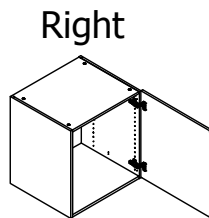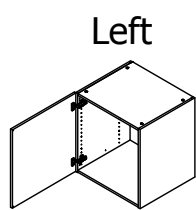

Front with integrated handle

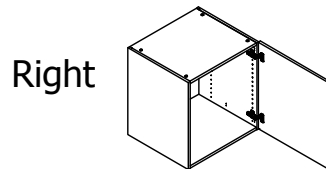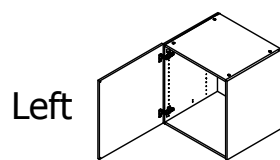

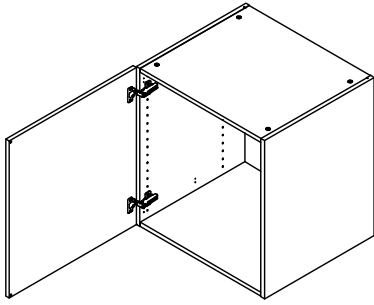


kvik





Check out easy
mounting of your bath

DBU6400


BU5160,000 / 176

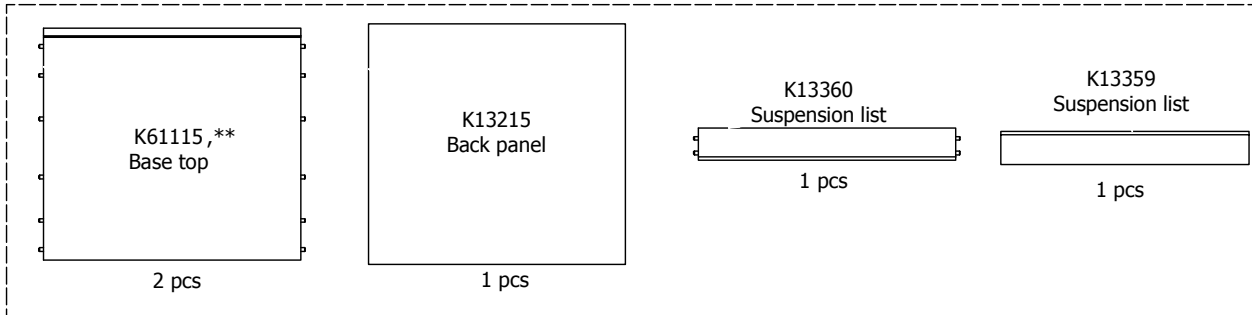

US6451,000 / KVIK

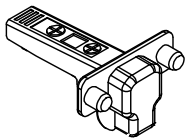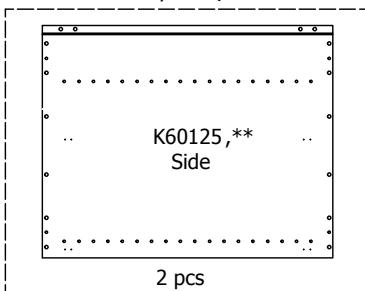

BP00418
Hinge 107 degrees
2 pcs



BP00417
Mounting plate
2 pcs

BP00250-BP00260

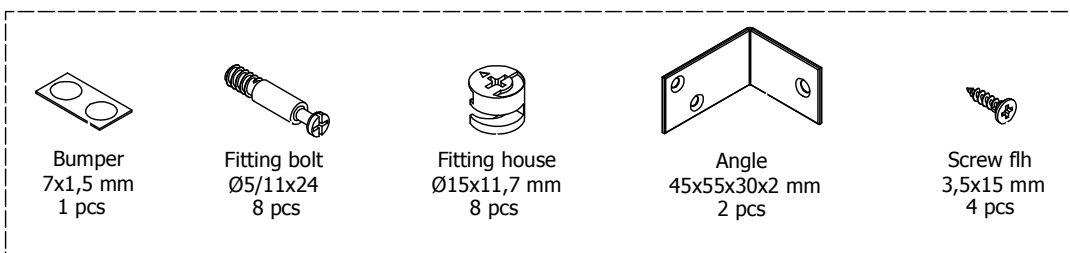


FIG. 1

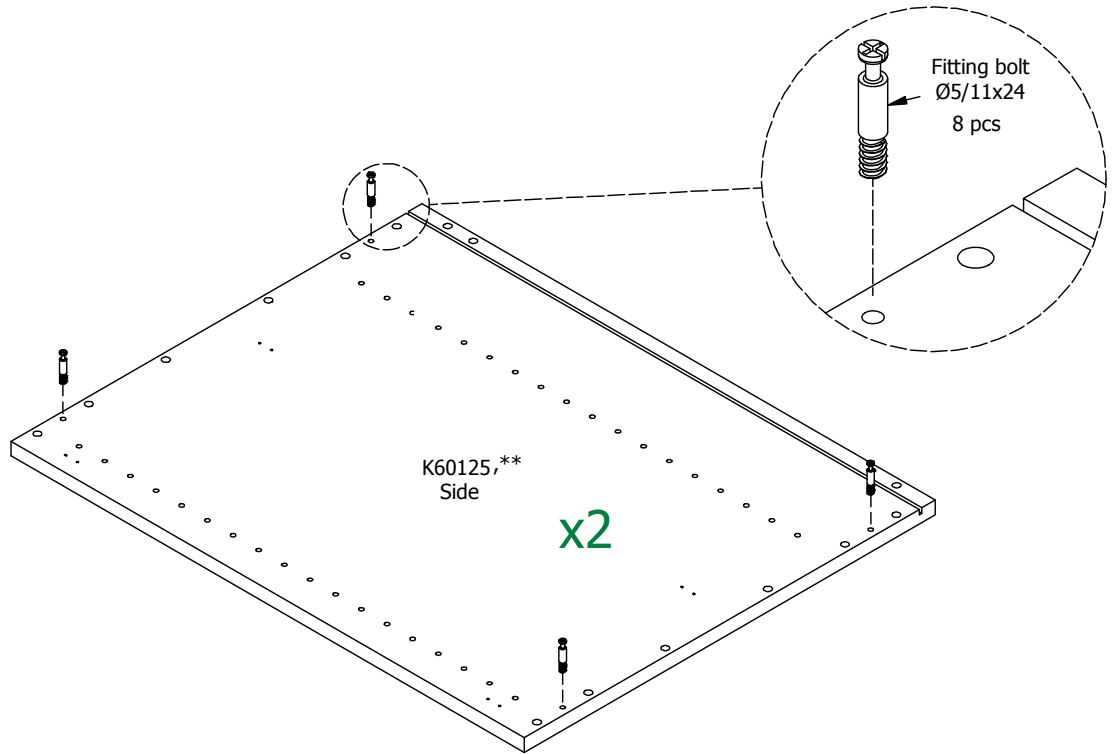


FIG. 2

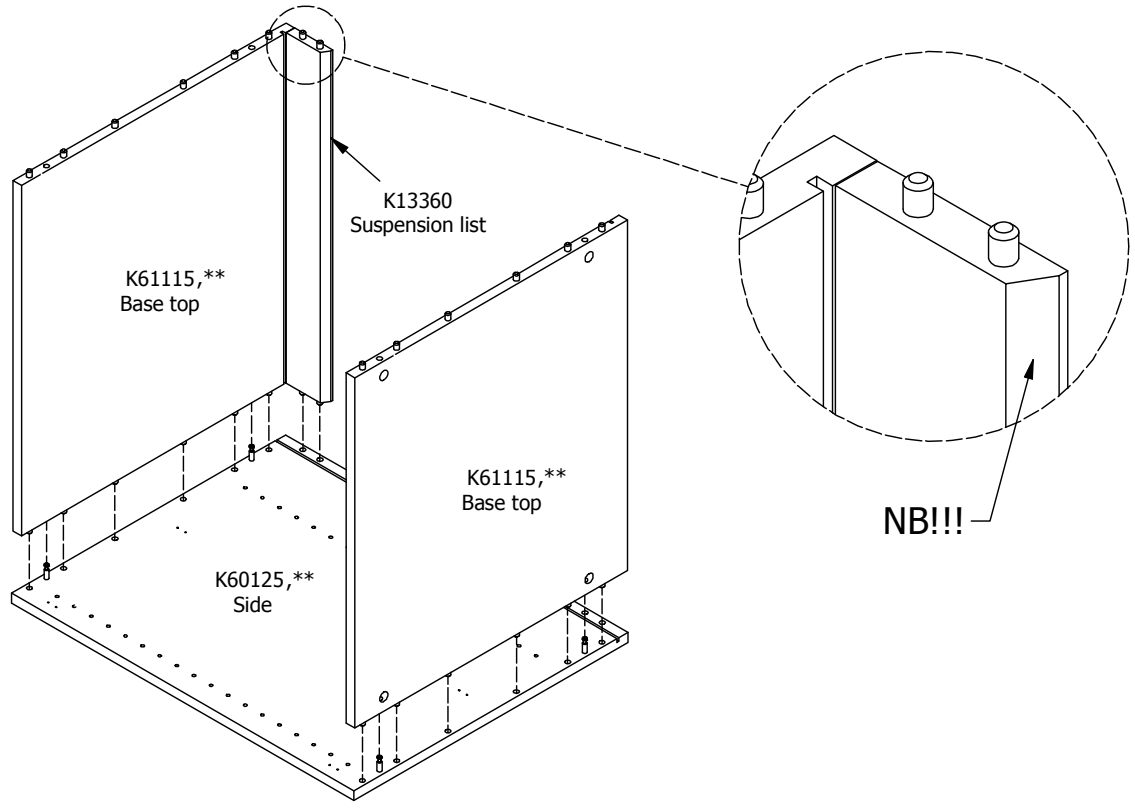


FIG. 3

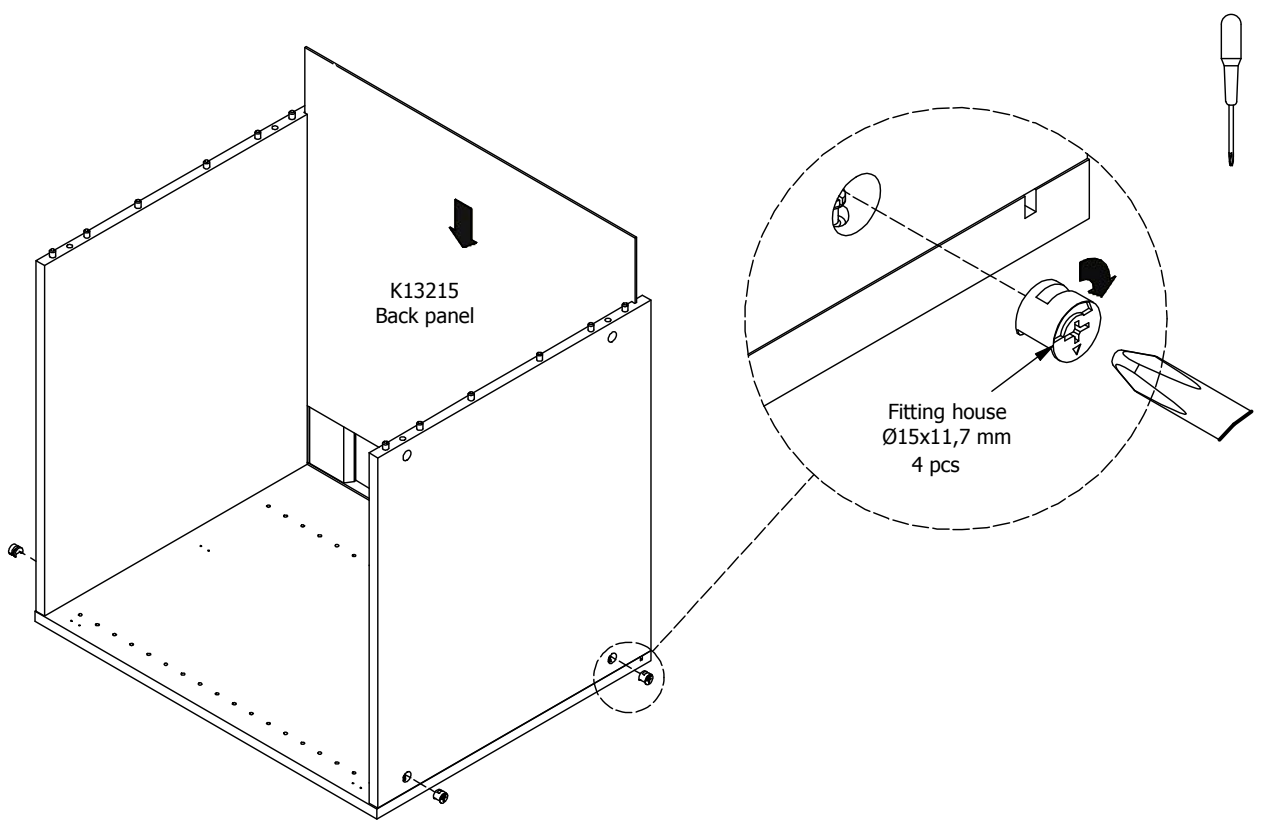


FIG. 4

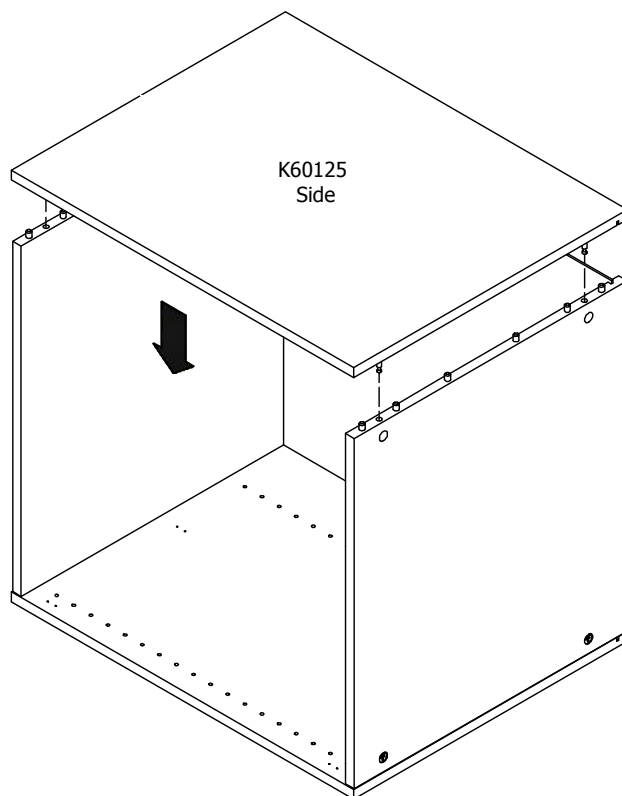


FIG. 5

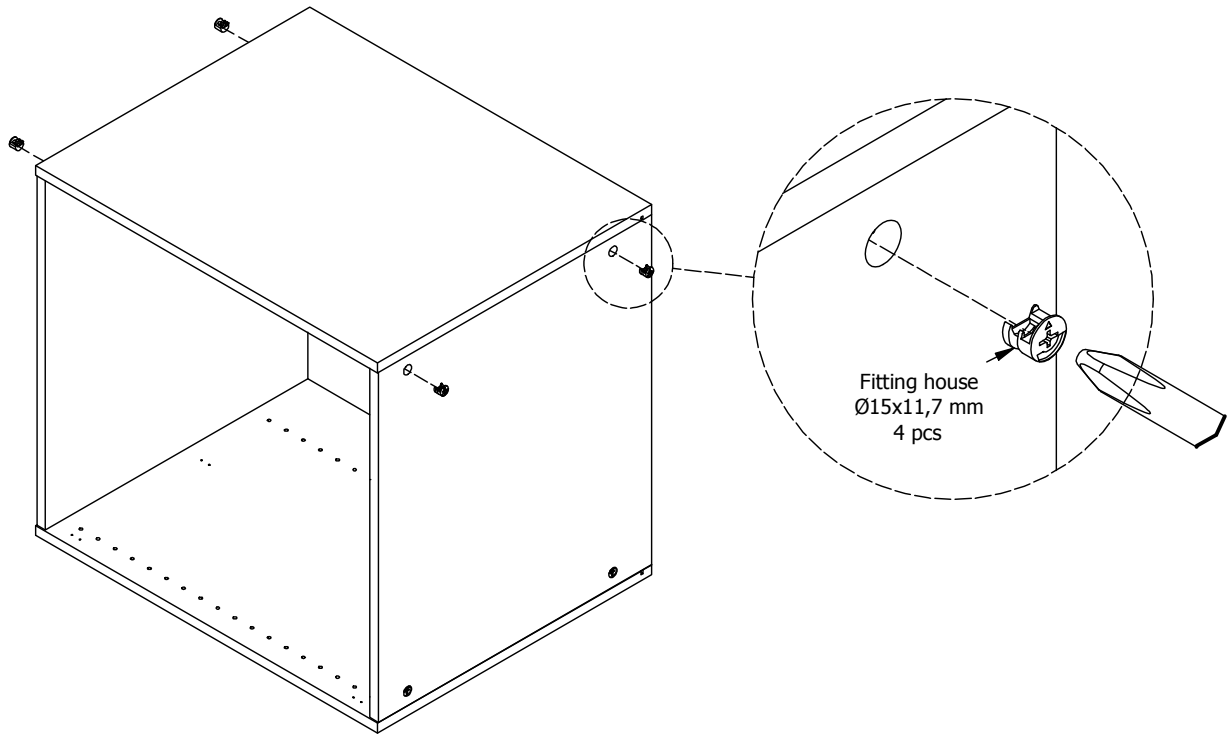


FIG. 6

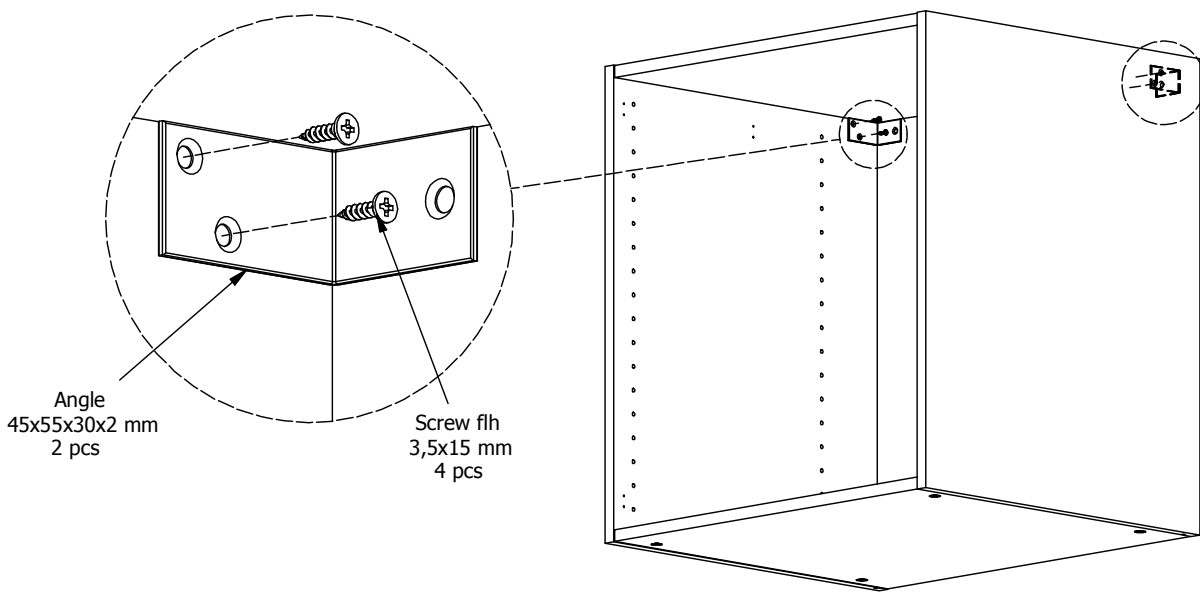


FIG. 7

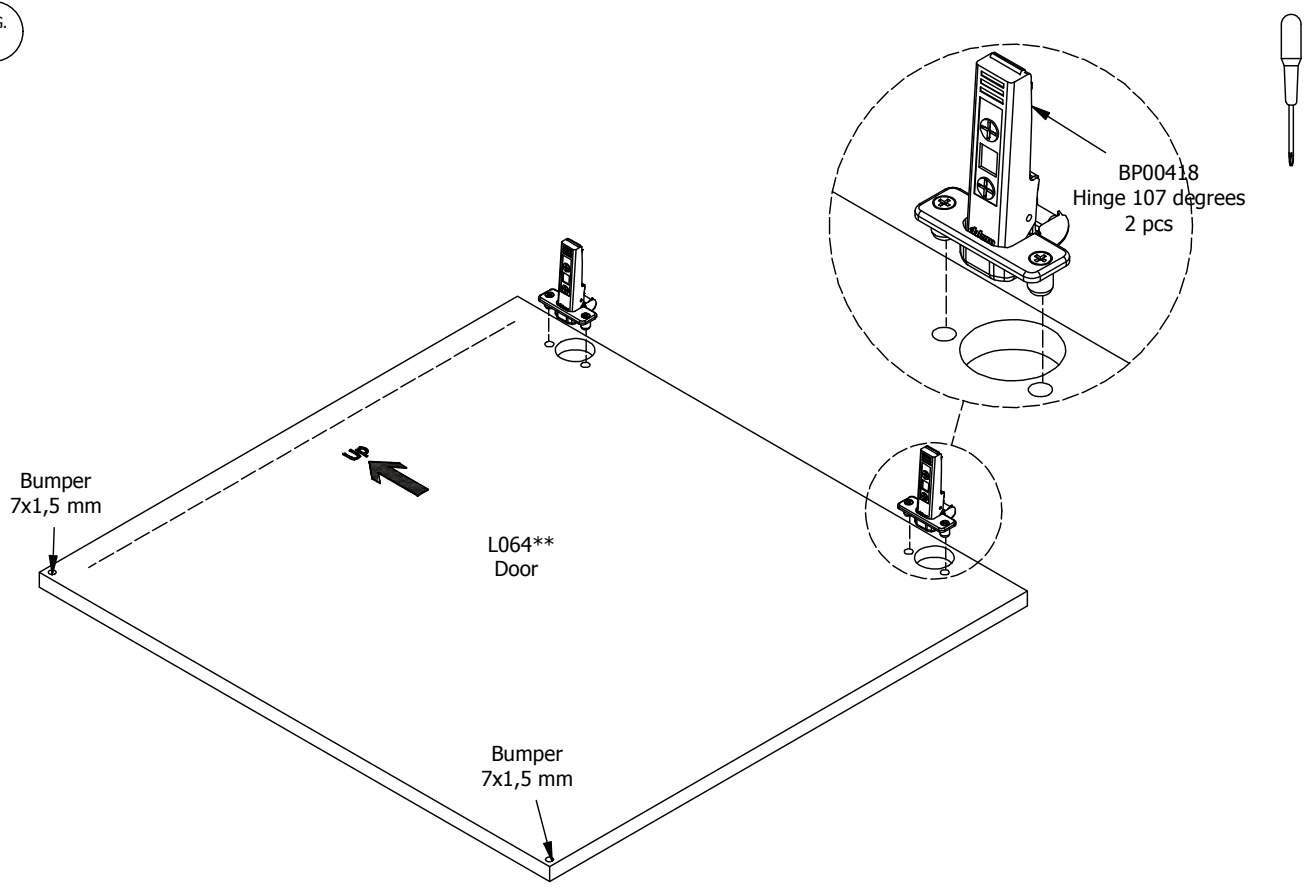


FIG. 8

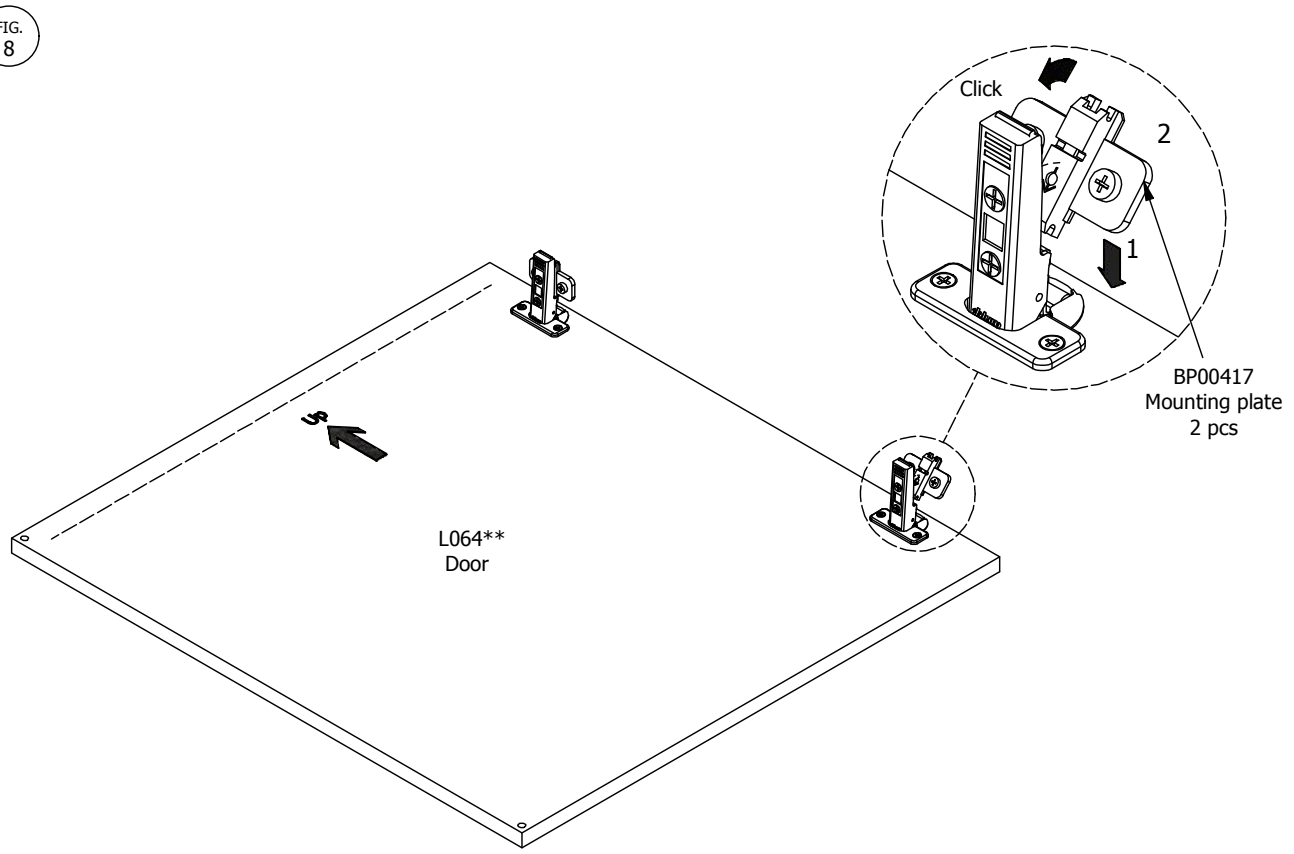


FIG. 9



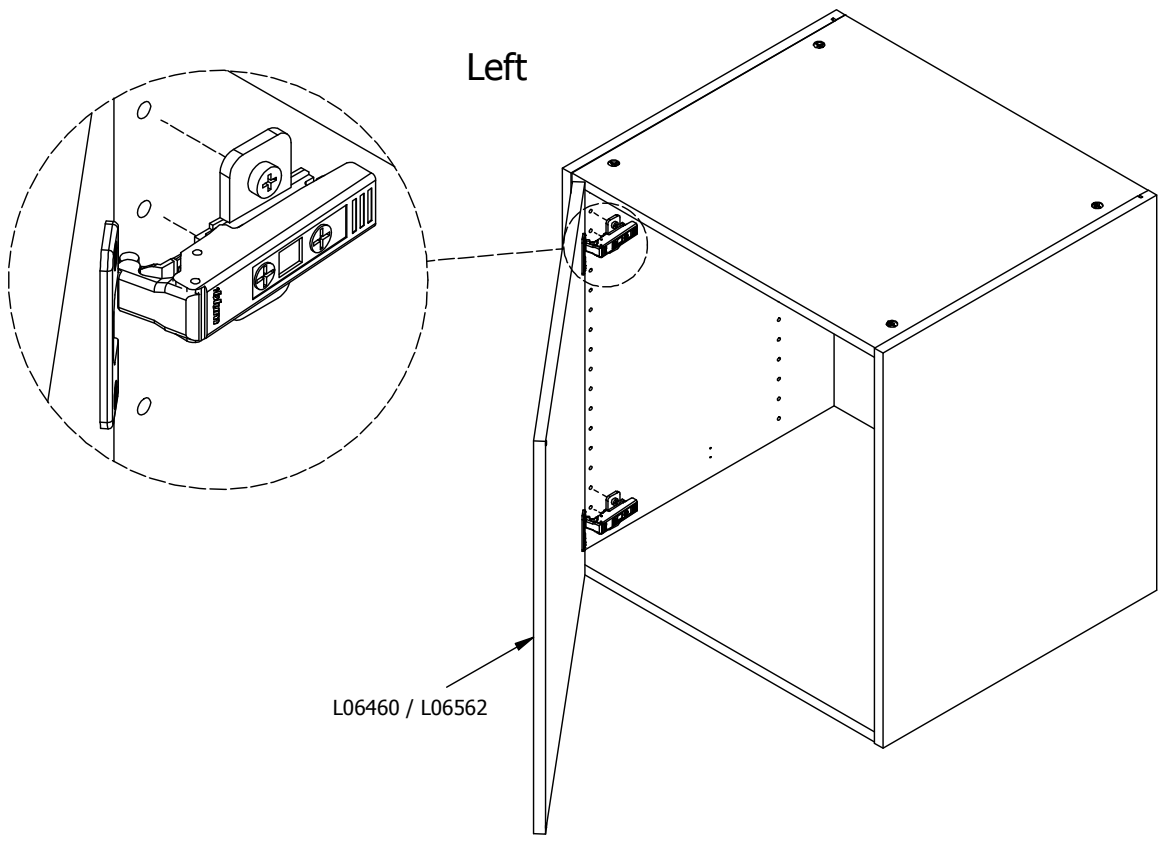


FIG. 10

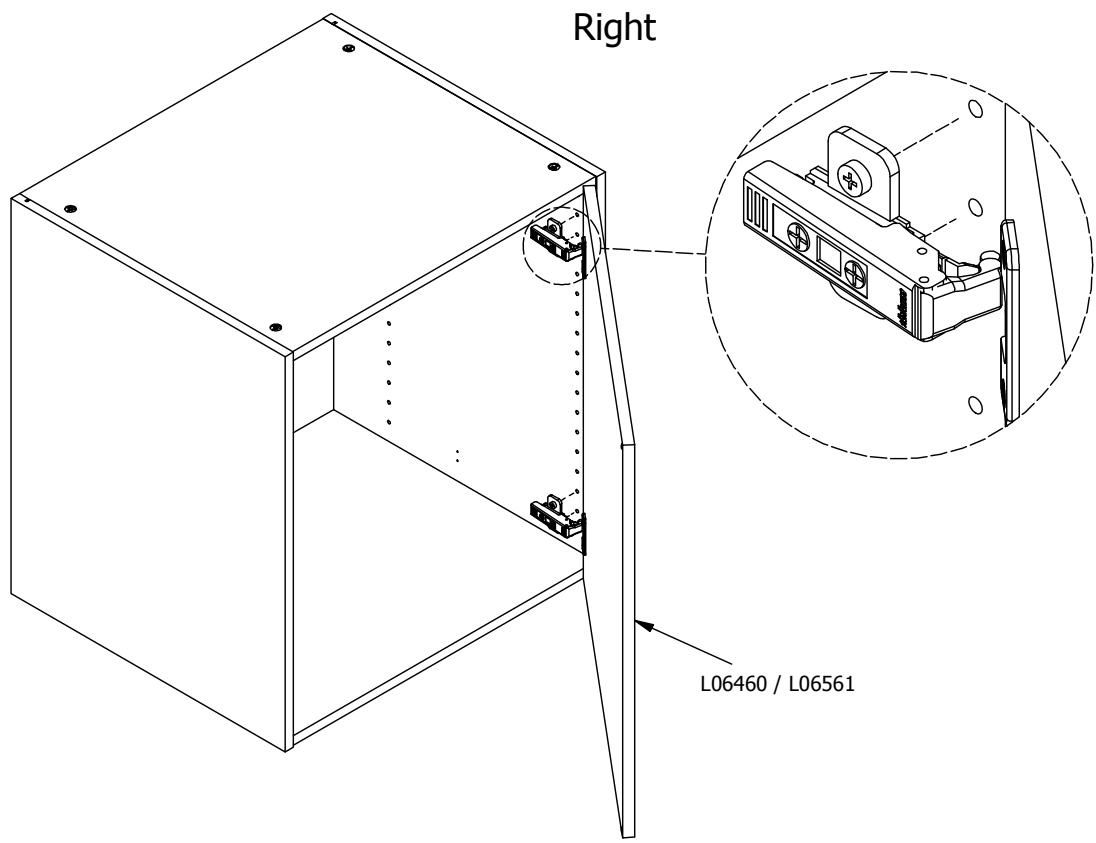

Adjustment

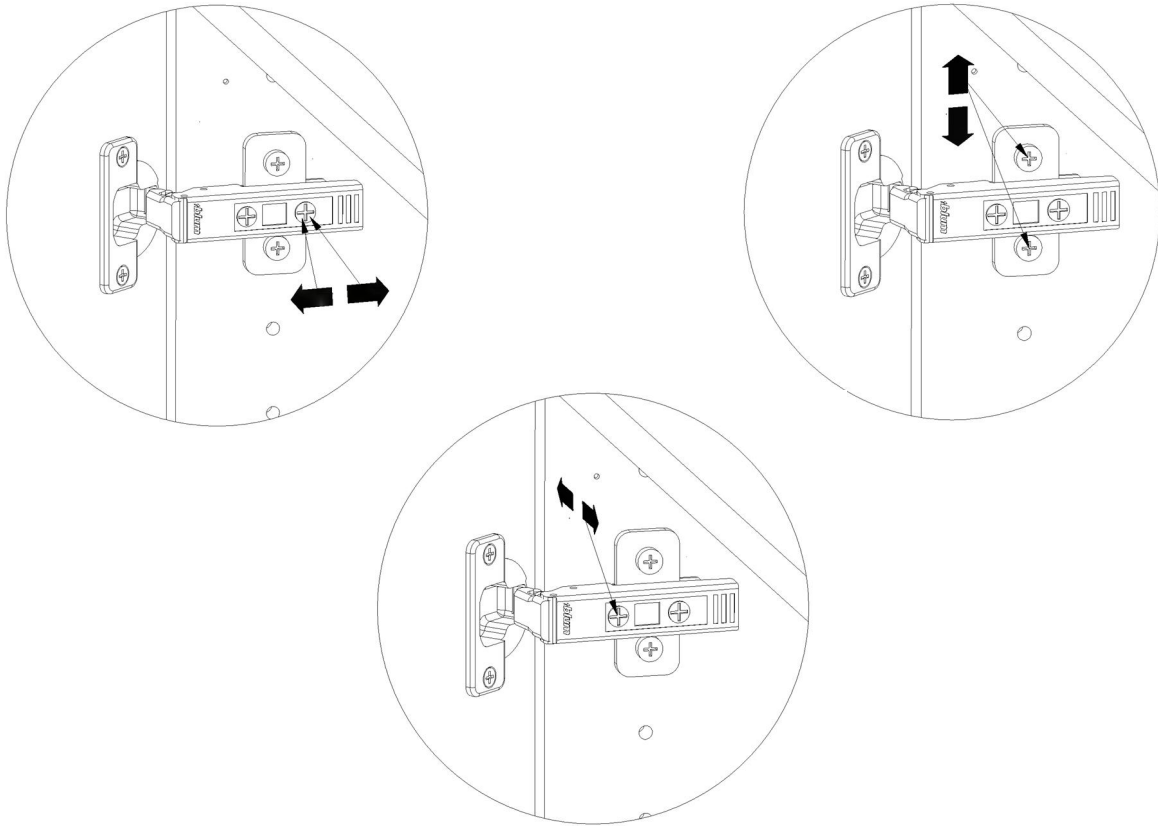

Installation, please read instruction SV12224

