


kvik




DBU6410


Check out easy mounting of you bath

Front without integrated handle

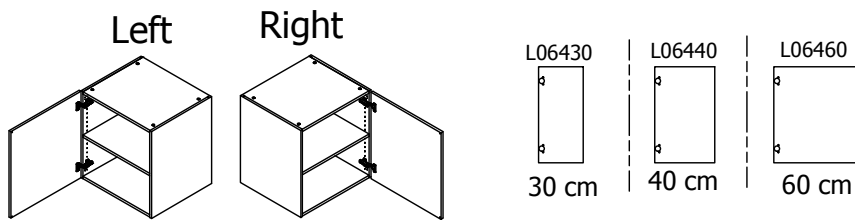

Front with integrated handle

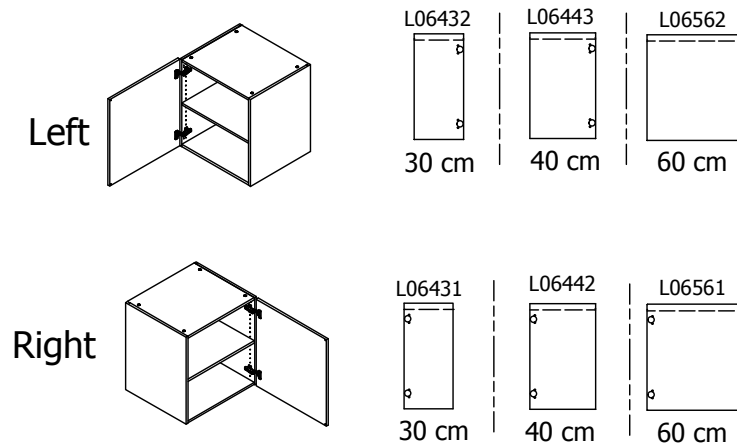

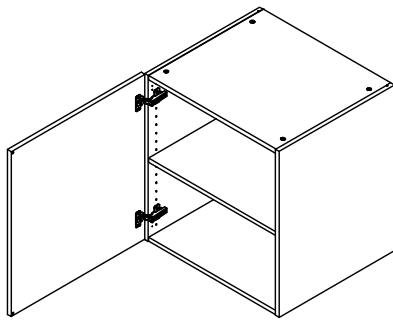


**kvik**

**DBU6410**





Check out easy  
mounting of you bath


BU51\*\*,000 / 176

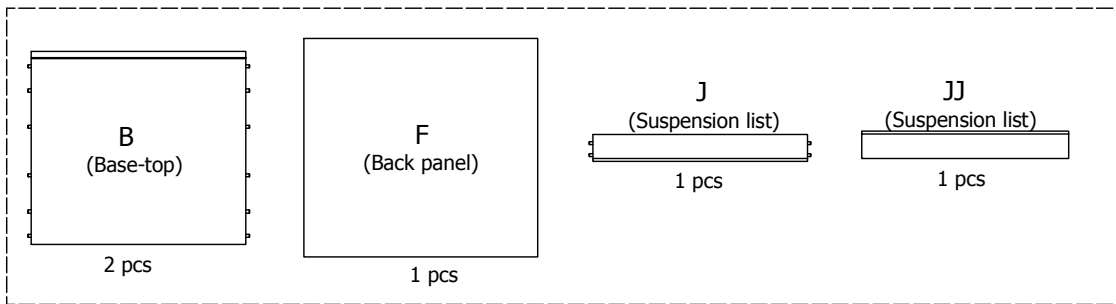

US6451,000 / KVIK

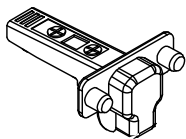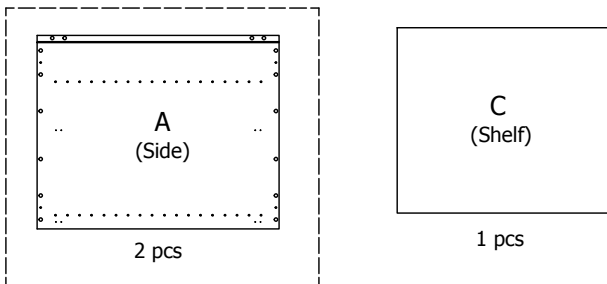

BP00418  
Hinge 107 degrees  
2 pcs



BP00417  
Mounting plate  
2 pcs

BP00250-BP00260

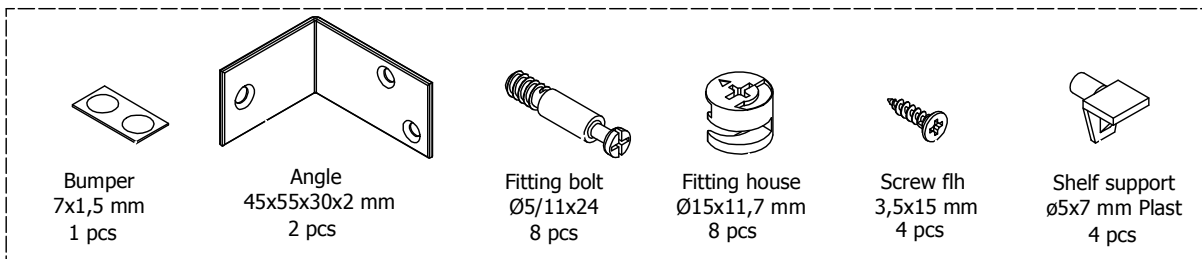


FIG. 1

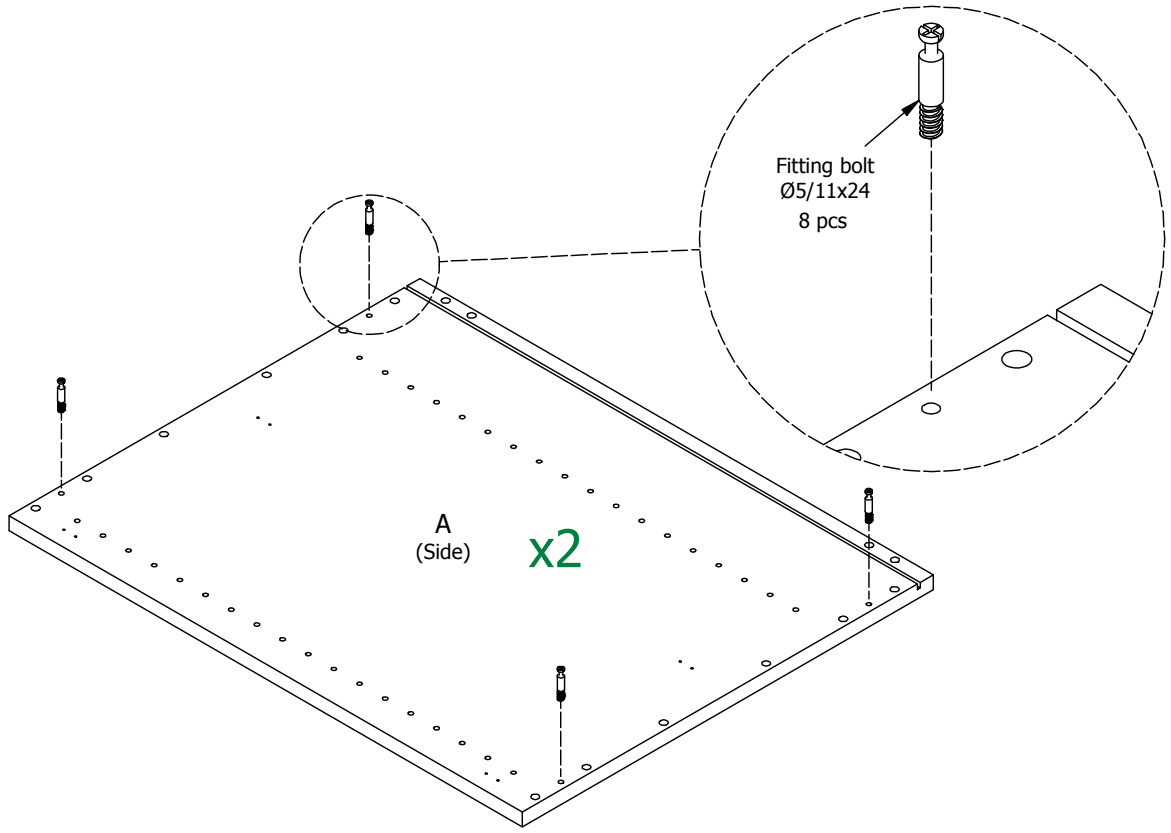


FIG. 2

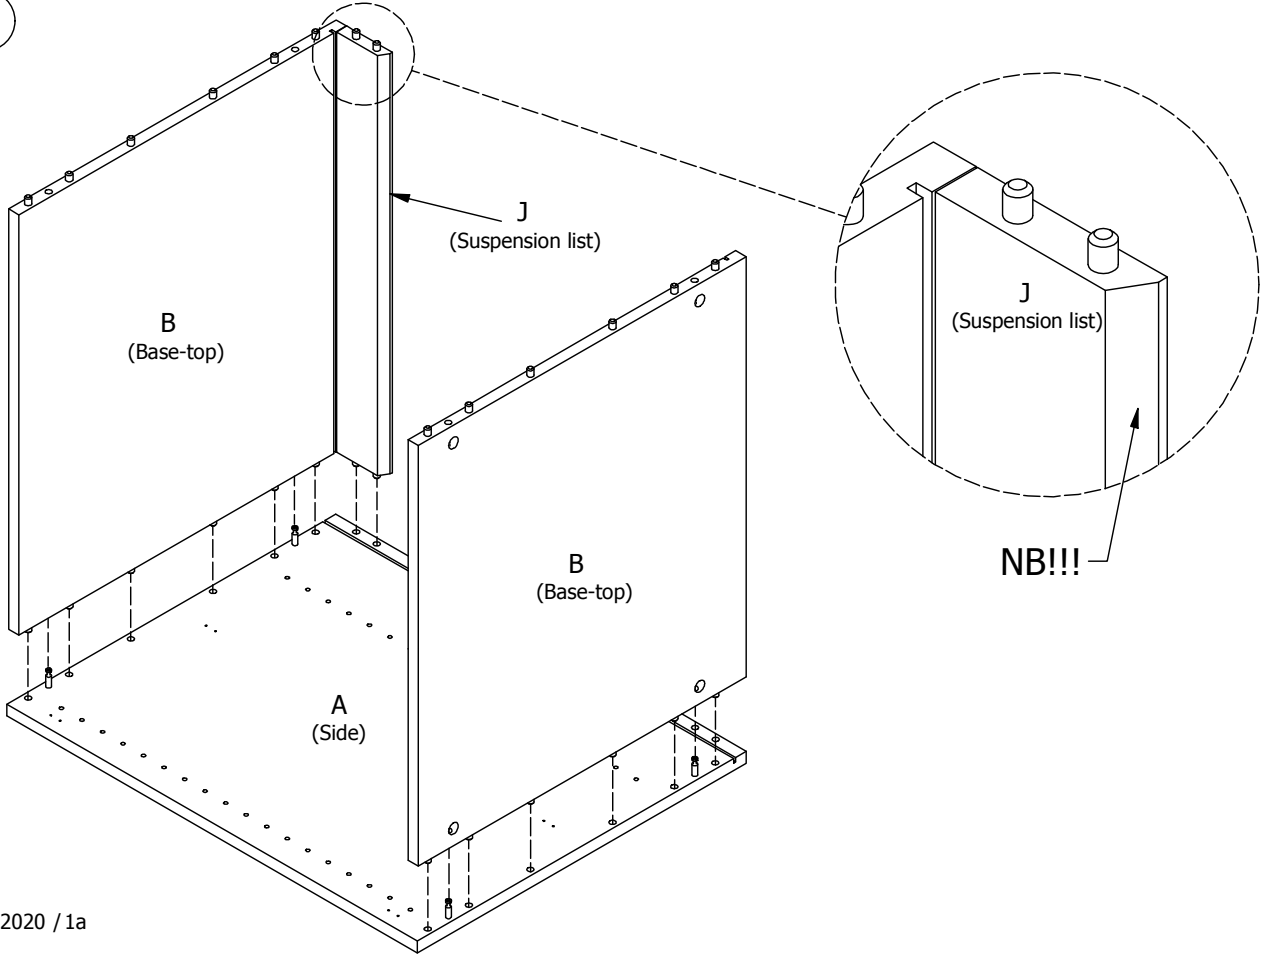


FIG. 3

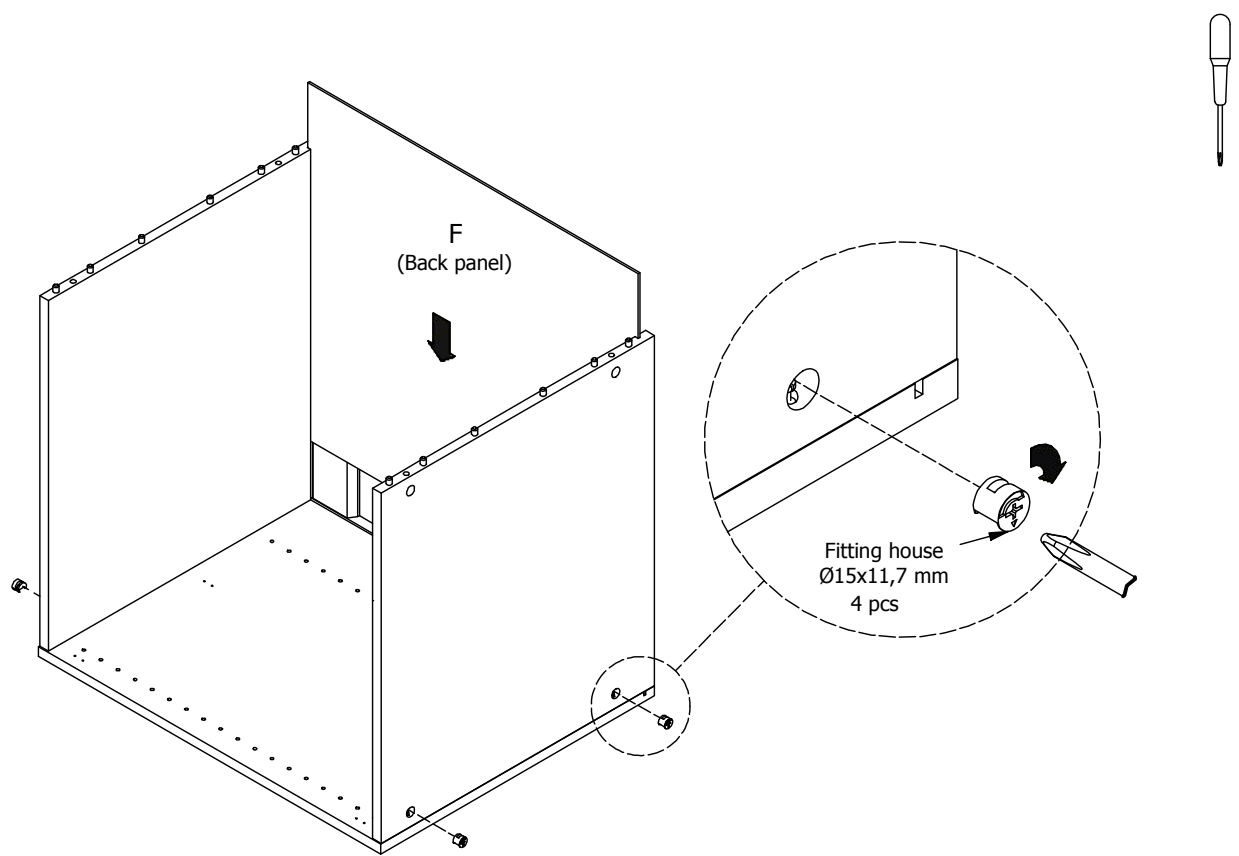


FIG. 4

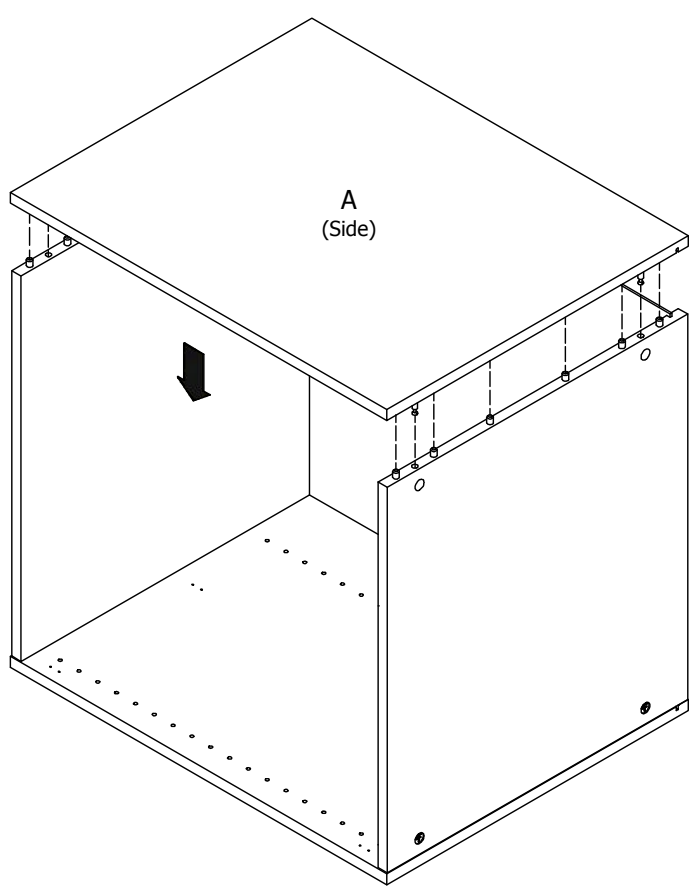


FIG. 5

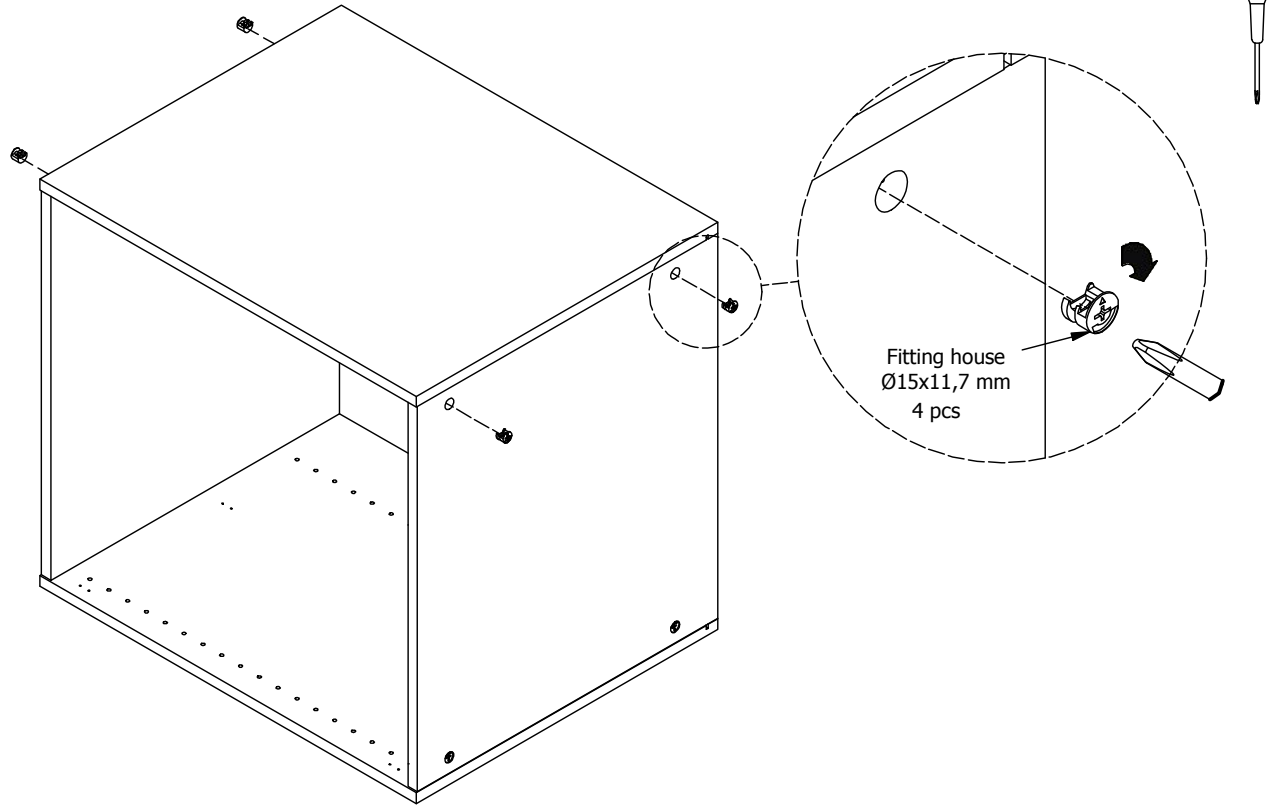


FIG. 6

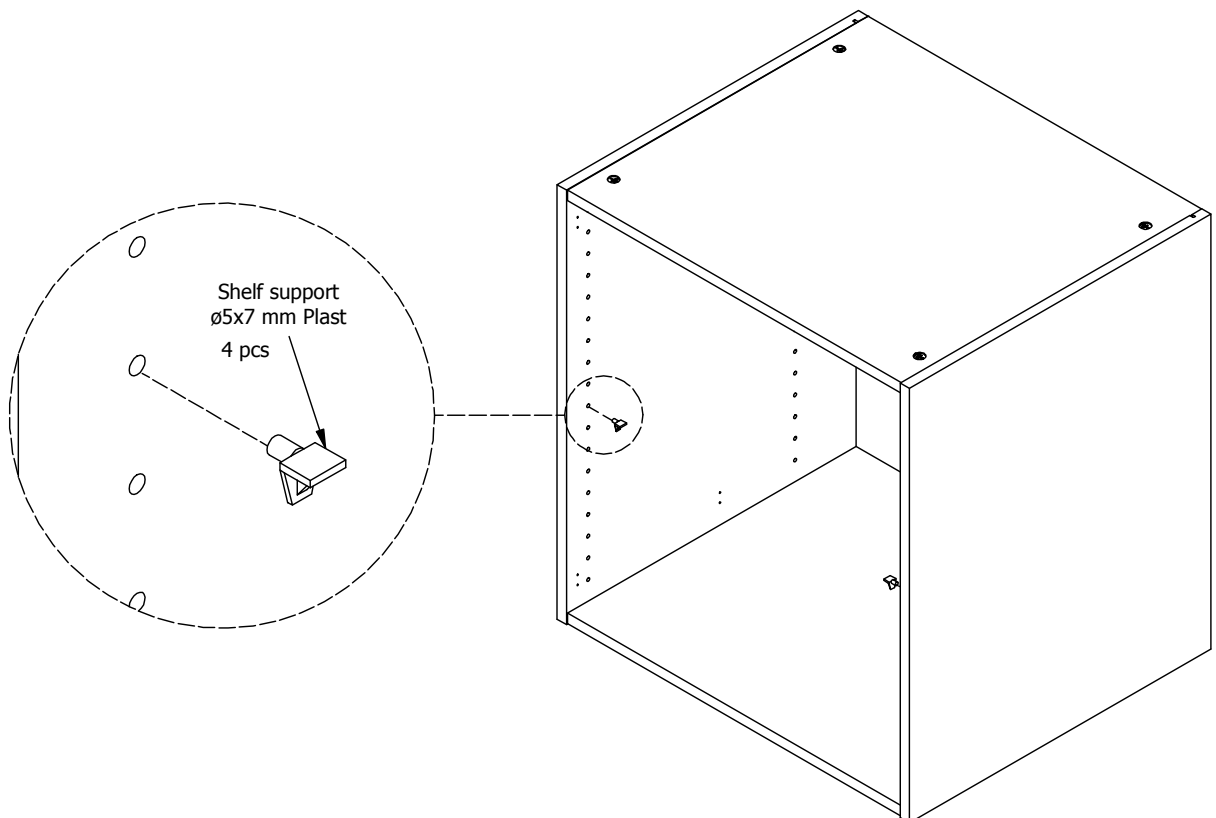


FIG. 7

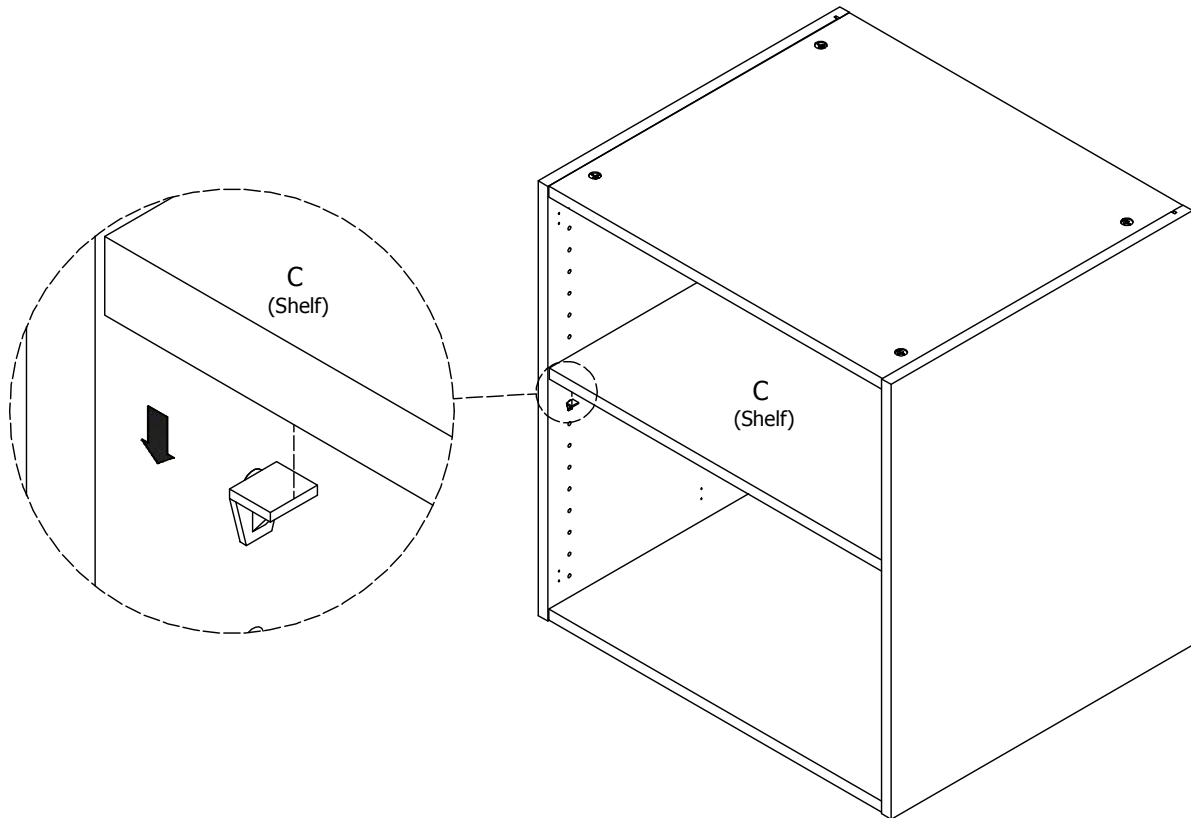


FIG. 8

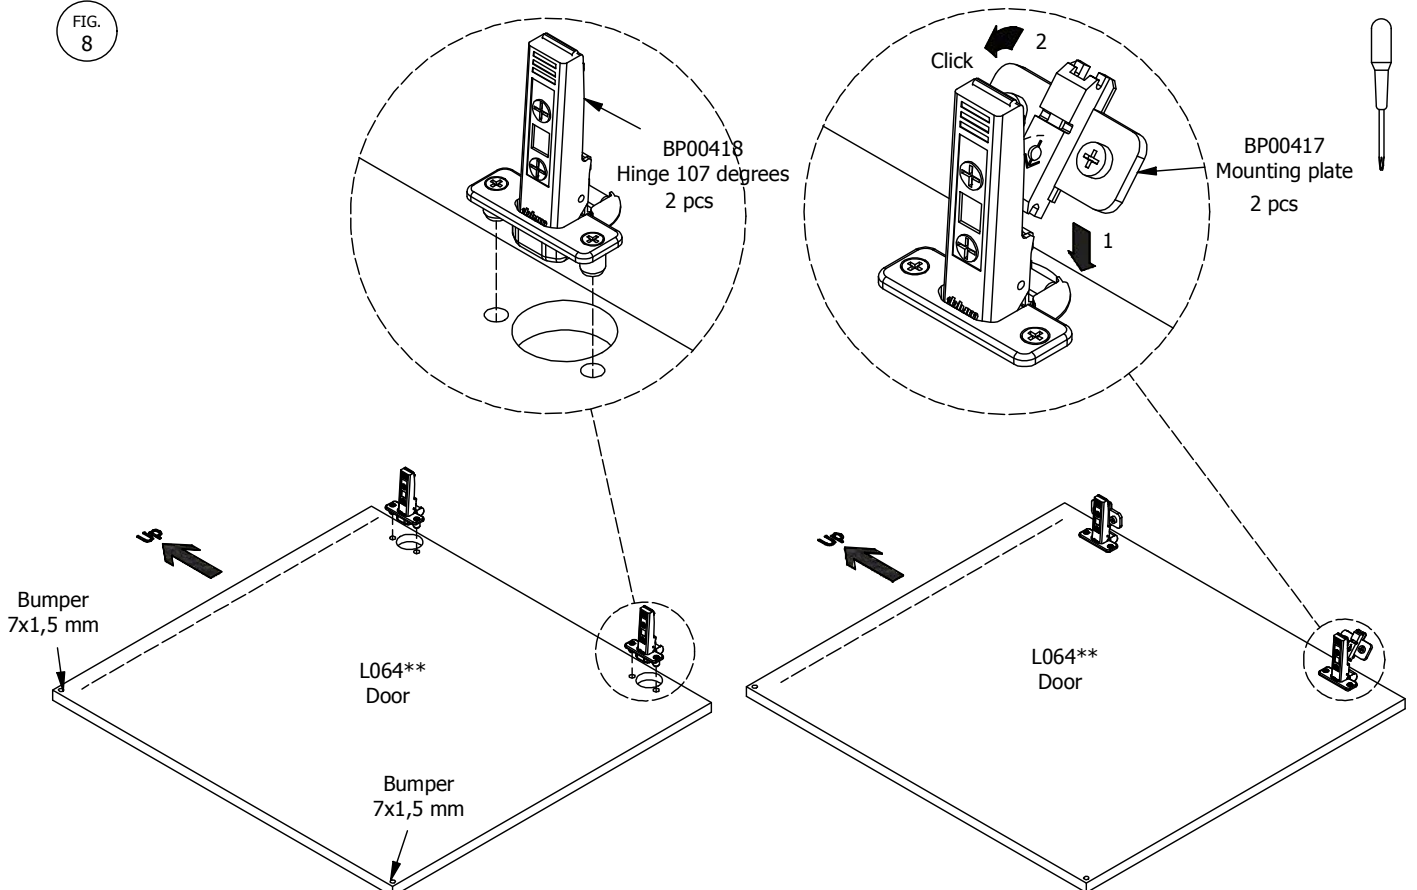


FIG. 9





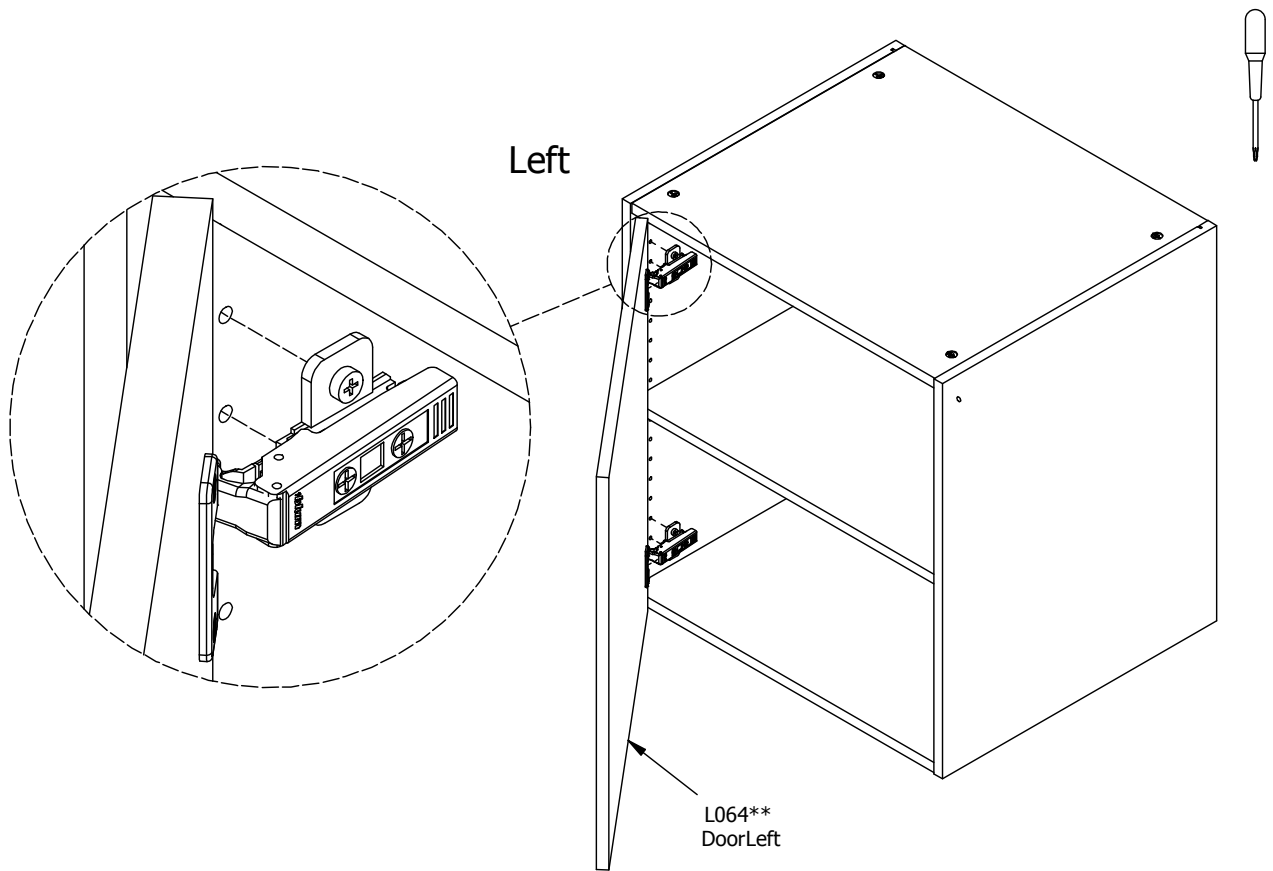


FIG. 10

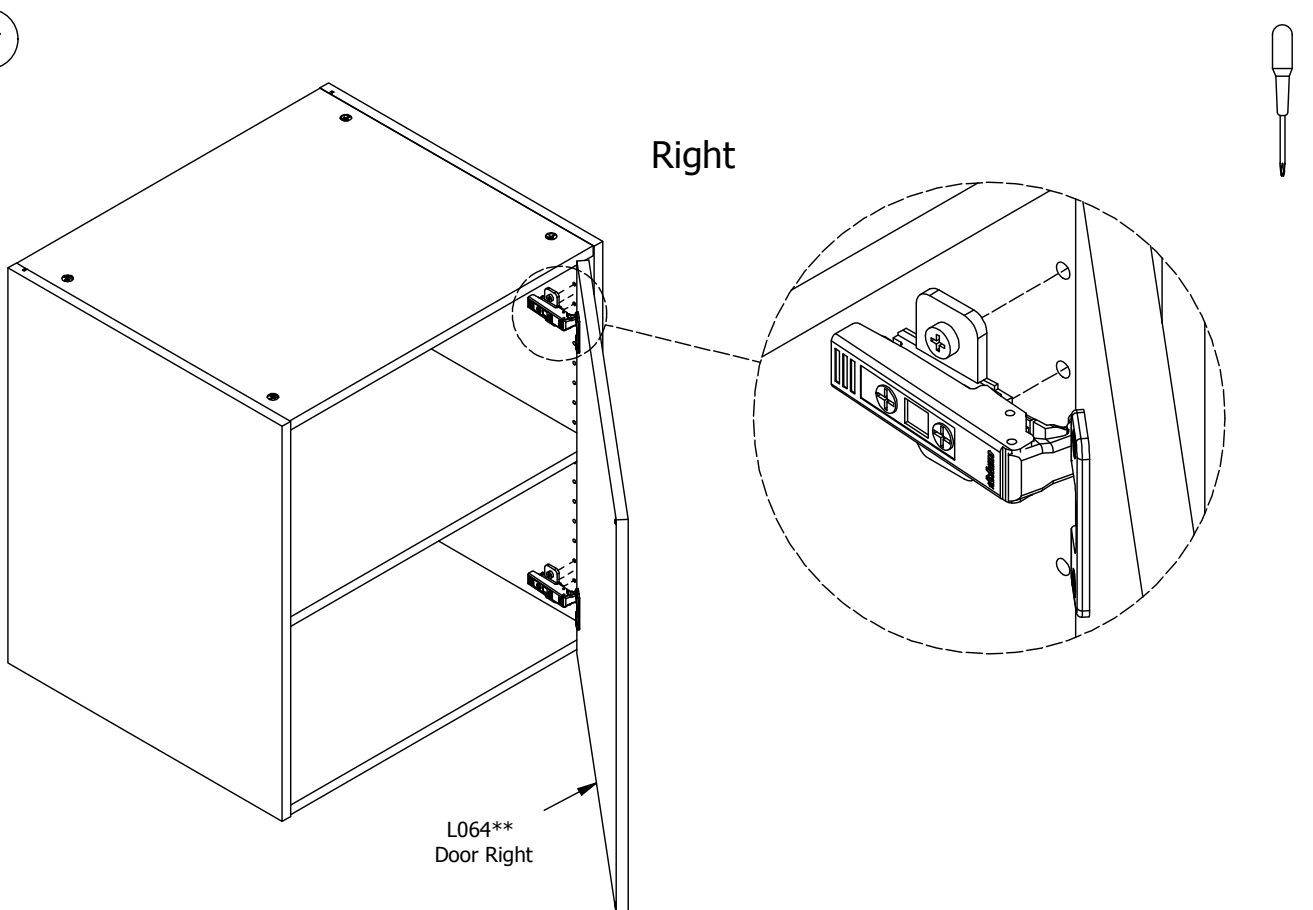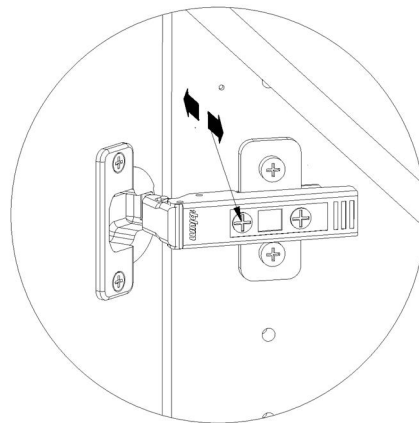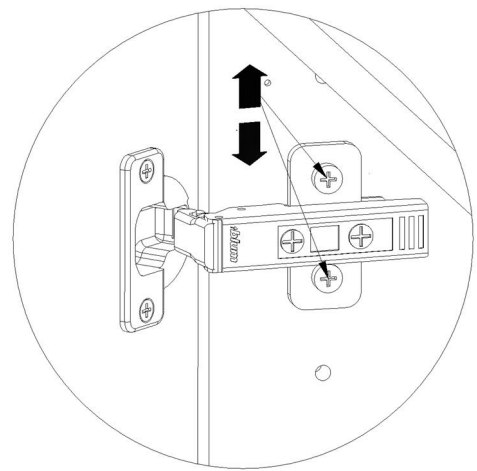

### Adjustment

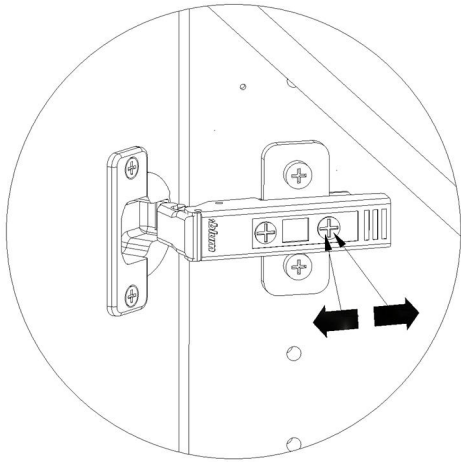

### Installation, please read instruction SV12224

SV12224

---

How to wall mount a cabinet . . . .

19-12-2019 / 1a 1 / 7